

FISH 4500/4600

FISHFINDERS

Installation and Operation Manual

English	2
Español	38
Português	75




NAVMAN

Contents

1 Introduction	4
1-1 Benefits of the FISH 4500/4600	4
1-2 How the FISH 4500/4600 works.....	5
2 Basic Operation	6
3 Setting up the FISH 4500/4600	8
3-1 Setup > System	9
3-2 Setup > Sonar	9
3-3 Setup > Fuel	10
3-4 Setup > Logs	11
3-5 Setup > Alarms	12
3-6 Setup > Units.....	12
3-7 Setup > Comms.....	13
3-8 Setup > Calibrate.....	13
4 Using the FISH 4500/4600	15
4-1 Interpreting the display	15
4-2 Single and Dual frequency fishfinding	17
4-3 Fish detection and display.....	19
4-4 Gain	20
4-5 Range	21
5 The Displays	22
5-1 Sonar display.....	22
5-2 Sonar Zoom display	23
5-3 Sonar Bottom display	24
5-4 Sonar 50/200 display	24
5-5 Sonar A-Scope display	24
5-6 Fuel display	25
5-7 Data display.....	25
5-8 About display	26
6 Installation and Maintenance	27
6-1 What comes with this product?	27
6-2 Options and Accessories	27
6-3 Mounting and removing the display unit.....	27
6-4 Power and transducer connections	28
6-5 Wiring options	29
6-6 Systems of several instruments	31
6-7 Cleaning and maintenance	31
Appendix A - Specifications	32
Appendix B - Dimensions	33
Appendix C - Troubleshooting	34
Appendix D - How to contact us	37

2 Basic Operation

Key Names

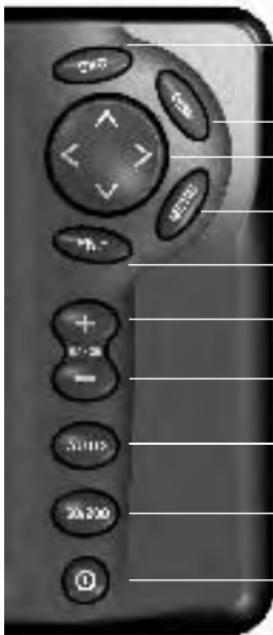

ESC	If a menu is not displayed then go to the sonar display. If a menu is displayed then cancel any changes and return to the previous menu.
DISP	Shows the Display menu.
<, >	Cursor keys move the selection highlight and change settings.
^, v	
MENU	Press to show the Options menu on a display; press again to show the Setup menu.
ENT	Confirms any changes or from a sonar display shows the Gain controls.
+	Increases the Range.
-	Decreases the Range.
AUTO	Selects manual, cruising or fishing mode.
50/200	Changes the frequency between 50 kHz and 200 kHz.
①	Powers On and Off; shows the Backlight control.

Key Operation

The fishfinder is operated through menus.

To select a menu item:

1. Press **DISP** or **MENU**
2. Press ^ or v to move the highlight to the item.
3. Press **ENT** to select the item.

To change a number, word or setting:

1. Use the cursor keys, <, ^, v, > to highlight the number, word or setting and to make the change(s).
2. Press **ENT** to confirm; **ESC** to cancel.

Power On / Auto Power

Press ① to turn the fishfinder on.

If the fishfinder is wired for auto power, it turns on automatically whenever the boat's ignition is turned on. This ensures that the engine hours counter and optional fuel functions are activated. *A title display appears briefly. This is followed automatically by the Installation menu the first time the fishfinder is switched on. Use this menu to specify the language (see section 3-1 Setup > System) and units (see section 3-6 Setup > Units).*

At all other times, the title display is followed by the display that was used most recently.

If the transducer is not connected, the message: Enter simulate mode? will appear. Press < or > to switch between Yes, No or Never. (If the transducer was not intentionally disconnected, turn off the fishfinder and refer to the section on Troubleshooting in Appendix B.) Press **ENT** to confirm the selection and the startup sequence will continue.