

# QUARTZ CLOCK CHART WEIGHT

## Operating Instructions

- 1) On the back of the clock, turn the round battery cover counter clockwise to open and remove door.
- 2) Lift battery out and remove the paper contact guard. Replace the battery cover.
- 3) To set the time, advance hour and minute hands by turning the black button at the bottom of the movement.
- 4) If clock stops, it is most likely due to a dead battery.
- 5) If clock is to be left unattended for long periods of time, the battery should be removed.

**Weems & Plath®**

214 EASTERN AVE. • ANNAPOLIS, MD 21403 • USA

410-263-6700 • fax 410-268-8713

[www.weems-plath.com](http://www.weems-plath.com)

E-mail: [support@weems-plath.com](mailto:support@weems-plath.com)