

GPS NAVIGATOR GP-80


Operator's Guide

The purpose of this operator's guide is to provide the basic operating procedures for this equipment. For detailed information, refer to the operator's manual.

Selecting Display Mode

Press [DISPLAY SEL].


Plotter 1/Plotter 2

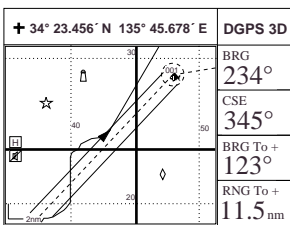

Ship's track and data


↑ Does not appear on Plotter 2 display.

Highway

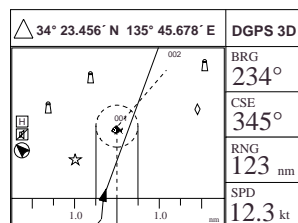


3D view of ship's track overlaid on intended course

Navigation

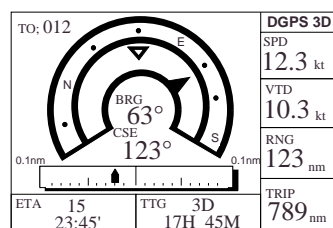

Graphic display of steering data

Data

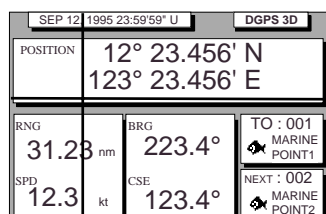

Comprehensive navigation data display

Enlarging/Shrinking the Display

Enlarging: Press [ZOOM IN].

Shrinking: Press [ZOOM OUT].

Shifting the Cursor

- 1) Press [CURSOR ON/OFF] to turn on the cursor.
- 2) Operate the cursor keys to shift the cursor.

Shifting the Display

- 1) Press [CURSOR ON/OFF] to turn off the cursor.
- 2) Operate the cursor keys to shift the display.

Centering Cursor Position

- 1) Press [CURSOR ON/OFF] to turn on the cursor.
- 2) Operate the cursor keys to position the cursor where desired.
- 3) Press [CENTER].

Entering/Erasing Marks

- 1) Press [CURSOR ON/OFF] to turn on the cursor.
- 2) Operate the cursor keys to position the cursor where desired.
- 3) Press [MARK].

To erase any mark (except MOB), place the cursor on the mark and press [CLEAR].



Selecting Mark Shape/Line Type

- 1) Press [MENU ESC] [2].
- 2) Press ▲ or ▼ to select Mark Shape (or Mark Line).
- 3) Press ◀ or ▶ to select mark shape (or mark line) desired.
- 4) Press [NU/CU ENT].
- 5) Press [MENU ESC].

Entering Event Mark

Press [EVENT MOB].

Entering MOB Mark

Press [EVENT MOB] until "Save MOB position" appears (about three seconds).

Stopping/Starting Plotting and Recording of Track

Press [PLOT ON/OFF]. "[H]" appears when recording is off.

Registering Waypoints

A waypoint can be entered four ways. Below is the procedure for entry by the cursor.

- 1) Press [WPT RTE].
- 2) Press [1] to select Cursor.
- 3) Operate the cursor keys to place cursor on position desired for waypoint.
- 4) Press [NU/CU ENT].
- 5) Press ▼.
- 6) Press ◀ or ▶ to select mark shape.
- 7) Press [NU/CU ENT].
- 8) Enter comment (maximum 12 alphanumeric characters).
- 9) Press [NU/CU ENT].

Registering Routes

- 1) Press [WPT RTE].
- 2) Press [5] to select Route Planning.
- 3) Press ▲ or ▼ to select route number.
- 4) Press ▶.
- 5) Enter waypoint number (three digits).
- 6) Press ▼ to enter next waypoint number.
- 7) Repeat steps 6 and 7 to complete the route.
- 8) Press [NU/CU ENT].

Setting/Cancelling Destination

Destination can be set four ways. Below is the method for setting destination by the cursor.

- 1) Press [GOTO].
- 2) Press [1] to select Cursor.
- 3) Place the cursor on position to set as destination.
- 4) Press [NU/CU ENT] twice.

To cancel destination, press [GOTO] [5] [NU/CU ENT].

Setting the Arrival Alarm

- 1) Press [MENU ESC] [4].
- 2) Press ▲ or ▼ to select Arrival/Anchor.
- 3) Press ◀ to select Arr.
- 4) Press ▼ to select Alarm Range.
- 5) Enter arrival alarm range.
- 6) Press [NU/CU ENT].
- 7) Press [MENU ESC].

The buzzer may be silenced by pressing [CLEAR].

