

FURUNO

INSTALLATION MANUAL

UAIS TRANSPONDER

Model FA-100



FURUNO ELECTRIC CO., LTD.

www.furuno.com

ECF

(Elemental Chlorine Free)

The paper used in this manual
is elemental chlorine free.

FURUNO ELECTRIC CO., LTD.

9-52 Ashihara-cho,
Nishinomiya, 662-8580, JAPAN

• FURUNO Authorized Distributor/Dealer

All rights reserved. Printed in Japan

Pub. No. IME-44170-J

(TASU) FA-100

A : SEP. 2002

J : FEB. 10, 2017



0 0 0 8 0 9 3 2 5 1 4



SAFETY INSTRUCTIONS



WARNING



ELECTRICAL SHOCK HAZARD
Do not open the equipment unless totally familiar with electrical circuits and service manual.

Only qualified personnel should work inside the equipment.

Turn off the power at the switchboard before beginning the installation.

Fire or electrical shock can result if the power is left on.

Do not install the equipment where it may get wet from rain or water splash.

Water in the equipment can result in fire, electrical shock or damage the equipment.

Be sure that the power supply is compatible with the voltage rating of the equipment.

Connection of an incorrect power supply can cause fire or damage the equipment. The voltage rating of the equipment appears on the label above the power connector.



CAUTION

Observe the following compass safe distances to prevent interference to a magnetic compass:

| | Standard compass | Steering compass |
|-----------|------------------|------------------|
| FA-100 | 1.0 m | 0.6 m |
| CB-100 | 0.6 m | 0.4 m |
| GVA-100 | 0.3 m | 0.3 m |
| DB-1 | 0.3 m | 0.3 m |
| PR-240-CE | 0.9m | 0.6 m |




Attach securely protection earth to the ship's body.

The protection earth is required to the power supply to prevent electrical shock

TABLE OF CONTENTS

| | |
|--|------------|
| SYSTEM CONFIGURATION | iii |
| EQUIPMENT LISTS | iv |
| 1. MOUNTING | 1 |
| 1.1 Antenna Unit..... | 1 |
| 1.1.1 GPS antenna unit | 1 |
| 1.1.2 VHF antenna | 3 |
| 1.1.3 GPS/VHF combined antenna | 5 |
| 1.2 Transponder Unit..... | 8 |
| 1.3 Junction Box..... | 10 |
| 1.4 Power Supply (option) | 11 |
| 1.5 Pilot Plug (option) | 11 |
| 2. WIRING | 12 |
| 3. INPUT/OUTPUT SIGNAL | 15 |
| 3.1 Inputs from Sensors..... | 15 |
| 3.2 Input/Output of AIS Signal | 16 |
| 3.3 Input of Gyrocompass Signal..... | 17 |
| 3.4 Alarm Signal Output..... | 17 |
| 3.5 LAN Input/Output..... | 18 |
| 3.6 Pilot Plug | 18 |
| 3.7 Jumper Setting in the Junction Box..... | 19 |
| 3.8 Input/Output Sentences | 20 |
| 3.9 Changing Ship's Mains Specifications..... | 21 |
| 4. SETTING AND ADJUSTMENT | 22 |
| 4.1 Setting MMSI, IMO No., Name and Call Sign | 22 |
| 4.2 Setting GPS Antenna Position and Ship's Type | 24 |
| 4.3 System Settings..... | 26 |
| PACKING LIST | |
| OUTLINE DRAWINGS | |
| INTERCONNECTION DIAGRAM | |

SYSTEM CONFIGURATION

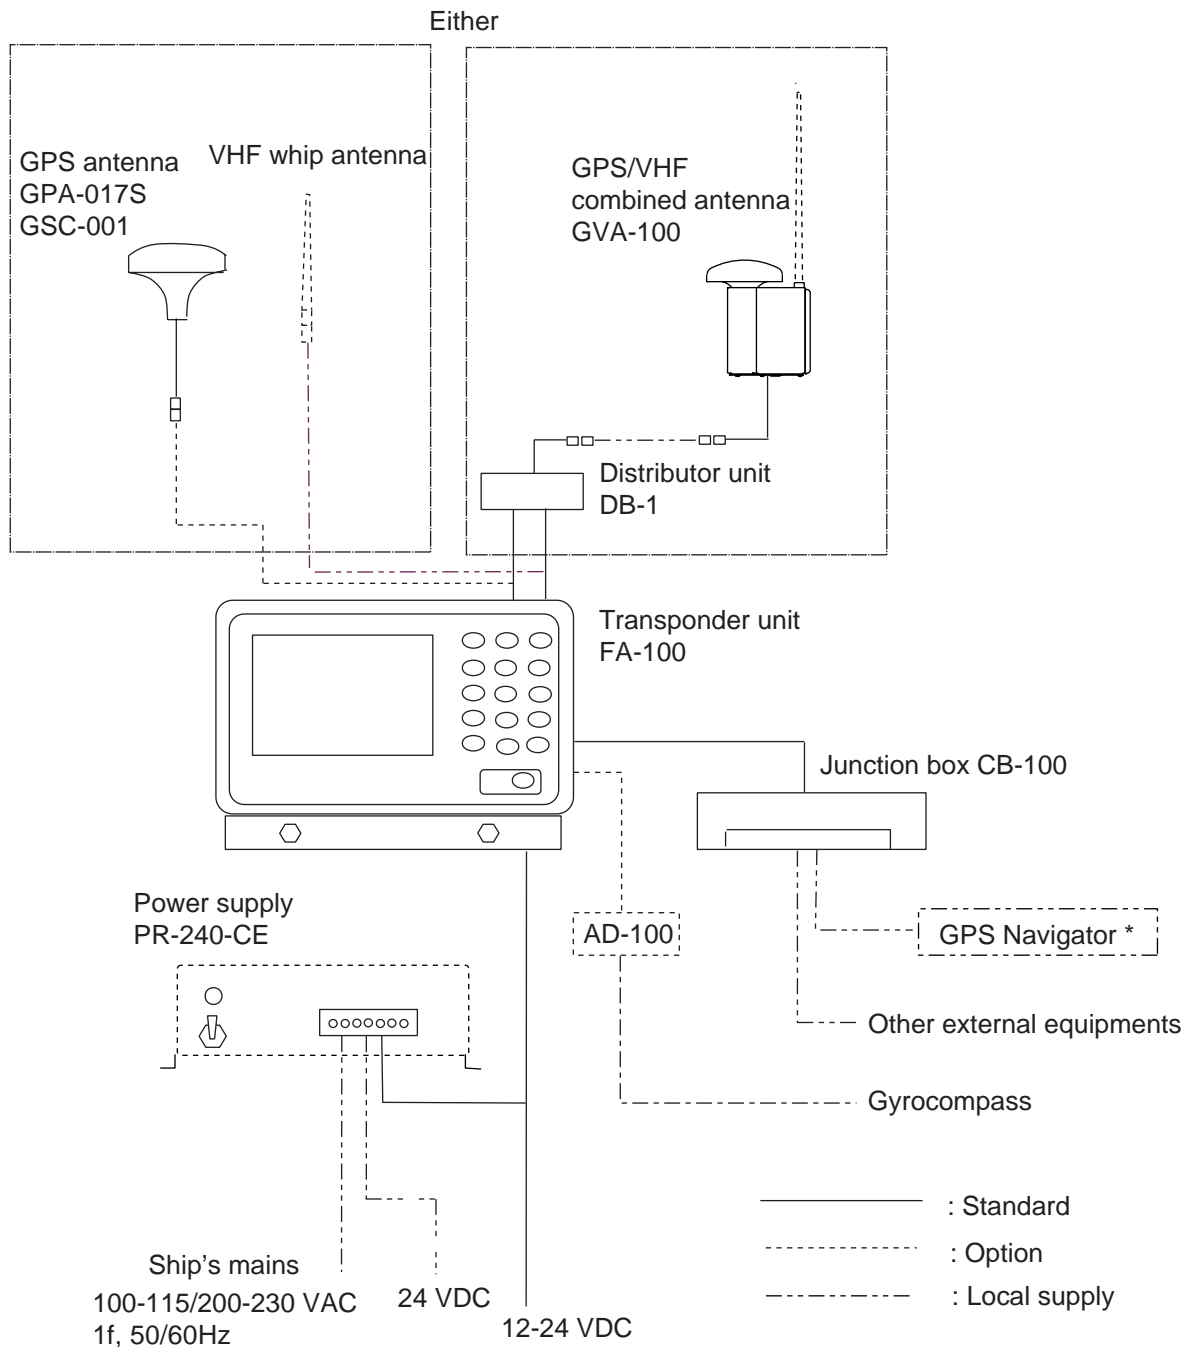

*: External GPS Navigation is required.

Category of the units

| | |
|-----------|----------------------------|
| GPA-017S | Exposed to the weather |
| GSC-001 | Exposed to the weather |
| GVA-100 | Exposed to the weather |
| FA-100 | Protected from the weather |
| CB-100 | Protected from the weather |
| DB-1 | Protected from the weather |
| PR-240-CE | Protected from the weather |

EQUIPMENT LISTS

Standard supply

| No. | Name | Type | Code no. | Qty | Remarks |
|-----|--------------------------|--------------|-------------|-----|--------------|
| 1 | Transponder Unit | FA-100 | - | 1 | |
| 2 | Junction Box | CB-100 | - | 1 | |
| 3 | Distributor Unit | DB-1 | - | 1 | |
| 4 | GPS Antenna | GPA-017S | - | 1 | Select one. |
| | GPS Antenna | GSC-001 | - | | |
| | GPS/VHF Combined Antenna | GVA-100* | - | | |
| 5 | Installation Materials | CP24-00101* | 005-950-730 | 1 | For DB-1 |
| | | CP24-00102* | 005-950-700 | 1 | For FA-100 |
| | | CP05-08701* | 005-949-280 | 1 | For CB-100 |
| | | CP24-00121** | 005-952-350 | 1 | For GPA-017S |
| | | CP24-00141* | 005-952-330 | 1 | For GVA-100 |

** : for Japan only

Optional supply

| No. | Name | Type | Code no. | Remarks |
|-----|-----------------------------|-----------------|-------------|---|
| 1 | Antenna cable set | CP20-01700(30m) | 004-372-110 | For GPS or Combined antenna 8D-FB-CV *30M*, CP20-01701 |
| 2 | Antenna cable set | CP20-01710(50m) | 004-372-120 | For GPS or Combined antenna 8D-FB-CV *50M*, CP20-01701 |
| 3 | Flush mount kit A | OP24-1 | 005-950-740 | |
| 4 | Flush mount kit B | OP24-2 | 005-950-750 | |
| 5 | Mast mount fixture | CP20-01111 | 004-365-780 | For GPA-017S |
| 6 | Right-angle antenna base | No.13-QA330 | 000-803-239 | For GPA-017S |
| 7 | L-angle antenna base | No.13-QA310 | 000-803-240 | For GPA-017S |
| 8 | Antenna base for rail mount | No.13-RC5160 | 000-806-114 | For GPA-017S |
| 9 | VHF whip antenna | CX4-3/FEC | 001-474-340 | For Japan only |
| 10 | VHF whip antenna | FAB-151D | 000-572-029 | For Japan only |
| 11 | Antenna fixing bracket | N173F/FEC | 001-474-350 | For CX4-3/FEC |
| 12 | Antenna fixing bracket | 4-310071 | 000-572-184 | For FAB-151D |
| 13 | VHF whip antenna | 150M-W2VN | 000-113-498 | For outside Japan |
| 14 | Power supply | PR-240-CE | - | Include installation materials CP24-00151* |
| 15 | Pilot plug | OP24-3 | 000-053-911 | |
| 16 | AD-100 | AD-100 | - | For gyrocompass |
| 17 | PC AIS software kit | OP24-24-1 | 005-954-420 | CD-ROM, USB protect key |
| 18 | φ80 Mast mount kit | OP24-5 | 005-954-510 | For Combined antenna |
| 19 | Distributor Unit | DB-1 | - | |

*: Refer to packing list at the back of this manual.

1. MOUNTING

1.1 Antenna Unit

1.1.1 GPS antenna unit


Install the GPS antenna unit referring to the drawing at the back of this manual D-1. When selecting a mounting location for the antenna, keep in mind the following points.

- Select a location out of the radar beam. The radar beam will obstruct or prevent reception of the GPS satellite signal.
- There should be no interfering object within the line-of-sight to the satellites. Objects within line-of-sight to a satellite, for example, a mast, may block reception or prolong acquisition time.
- Mount the antenna unit as high as possible to keep it free of interfering objects and water spray, which can interrupt reception of GPS satellite signal if the water freezes.

Extending antenna cable

Three types of antenna cable extensions are optionally available.

a) Antenna cable set CP20-01700

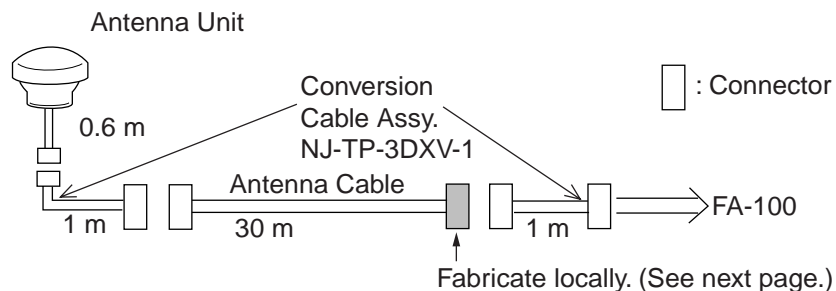

◆ Waterproofing connector

Wrap connector with vulcanizing tape and then vinyl tape. Bind the tape end with a cable-tie.



Waterproofing connector


b) Antenna cable set CP20-01710 (8D-FB-CV, 50m)

Connect the cable the same as a) above.


c) Cable type RG-10U/Y (shipyard supply)

Note: The length of this cable should be less than 20 m to prevent signal loss. The coax. coupling cable assy. (type: NJ-TP+3DXV-1, code no. 000-123-809), coaxial connector (N-P-8DFB; supplied), vulcanizing tape and vinyl tape are required. Fabricate both ends of the cable as shown in the figure on the next page.

How to attach the connector N-P-8DFB for cable 8D-FB-CV

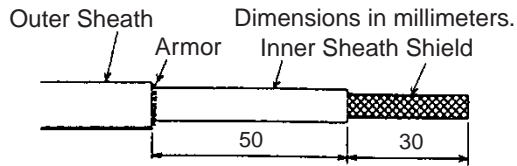


Remove outer sheath and armor by the dimensions shown left.
Expose inner sheath and shield by the dimensions shown left.

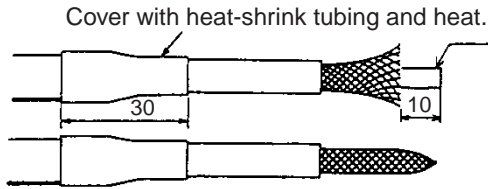


Cut off insulator and core by 10mm.

Twist shield end.

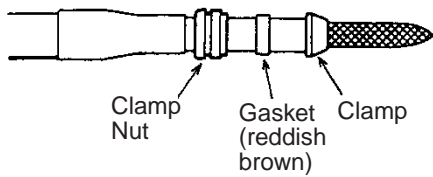


Slip on clamp nut, gasket and clamp as shown left.

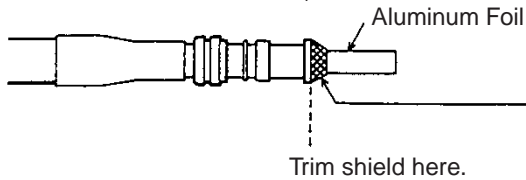


Fold back shield over clamp and trim.



Cut aluminum foil at four places, 90° from one another.

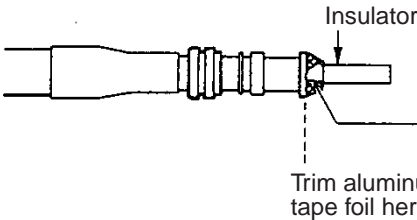


Fold back aluminum foil onto shield and trim.



Expose the insulator by 1mm.

Expose the core by 5mm.

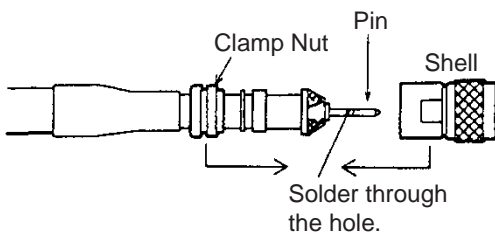

Slip the pin onto the conductor. Solder them together through the hole on the pin.

Insert the pin into the shell. Screw the clamp nut into the shell.
(Tighten by turning the clamp nut. Do not tighten by turning the shell.)

How to attach connector N-P-8DFB

1.1.2 VHF antenna

Location

Location of the mandatory AIS VHF-antenna should be carefully considered. Digital communication is more sensitive than analog/voice communication to interference created by reflections in obstructions like masts and booms. It may be necessary to relocate the VHF radiotelephone antenna to minimize interference effects.


To minimise interference effects, the following guidelines apply:

- The AIS VHF antenna should be placed in an elevated position that is as free as possible with a minimum of 0.5 meters in the horizontal direction from constructions made of conductive materials. The antenna should not be installed close to any large vertical obstruction. The objective for the AIS VHF antenna is to see the horizon freely through 360 degrees.
- The AIS VHF antenna should be installed safely away from interfering high-power energy sources like radar and other transmitting radio antennas, preferably at least 3 meters away from and out of the transmitting beam.
- There should not be more than one antenna on the same plane. The AIS VHF antenna should be mounted directly above or below the ship's primary VHF radiotelephone antenna, with no horizontal separation and with a minimum of 2.8 meters vertical separation. If it is located on the same plane as other antennas, the distance apart should be at least 10 meters.


Cabling

- The cable should be kept as short as possible to minimize signal attenuation. Coaxial cables equal to or better than RG10U/Y are recommended.
- All outdoor installed connectors on coaxial cables should be fitted with preventive isolation such as vulcanizing tape to protect against water penetration into the antenna cable. Also, apply marine sealant at the antenna base to prevent water intrusion from the screw part of antenna base.
- Coaxial cables should be installed in separate signal cable channels/tubes and at least 10 cm away from power supply cables. Crossing of cables should be done at right angles (90°). The minimum bend radius of the coaxial cable should be 5 times the cable's outer diameter.
- Install the VHF whip antenna referring to the outline drawing at the back of this manual. Separate this antenna from other VHF radiotelephone antennas as shown on the next page to prevent interference to the FA-100.

Horizontal separation distance

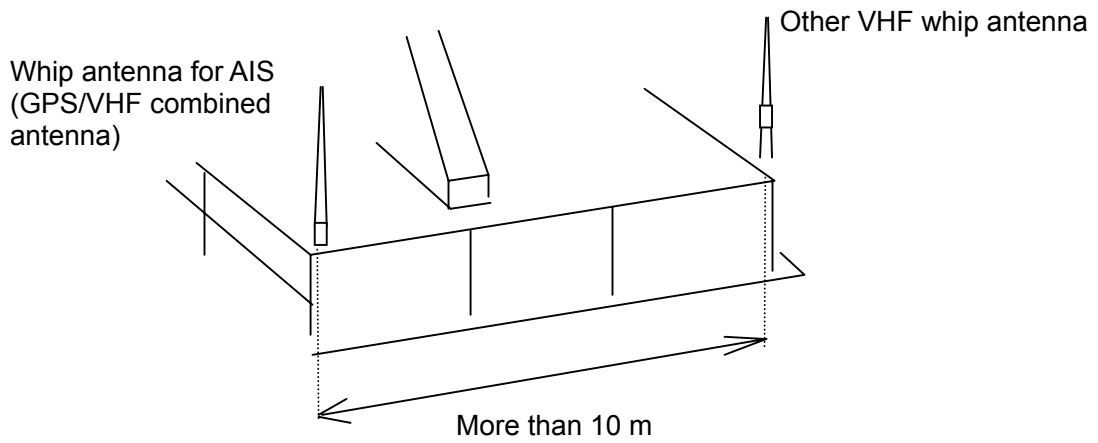

Vertical separation distance

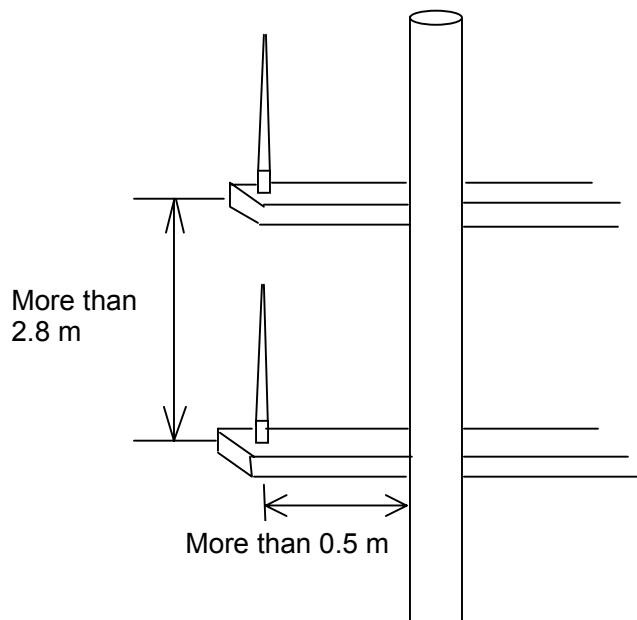


- When coaxial cable RG-10U/Y (shipyard supply) is used, attach the coaxial plug M-P-7 (dockyard supply) as shown on the next page.

How to attach the plug M-P-7

Lay the coaxial cable and attach an M-type plug (if necessary) to the cable as follows.


1. Remove the sheath by 30 mm.
2. Bare 23 mm of the center conductor. Trim braided shield by 5 mm and tin.
3. Slide coupling ring onto cable.
4. Screw the plug assembly on the cable.
5. Solder plug assembly to braided shield through solder holes. Solder contact sleeve to conductor.
6. Screw coupling ring into plug assembly.

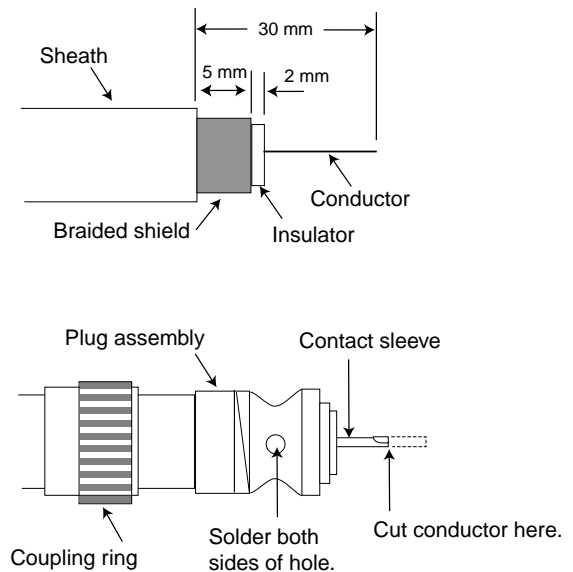

1.1.3 GPS/VHF combined antenna

Install the combined antenna unit referring to the outline drawing. When selecting a mounting location for the antenna, keep in mind the following points.

- Select a location out of the radar beam. The radar beam will obstruct or prevent reception of the GPS satellite signal.
- There should be no interfering object within the line-of-sight to the satellites. Objects within line-of-sight to a satellite, for example, a mast, may block reception or prolong acquisition time.
- Mount the antenna unit as high as possible. Mounting it this way keeps it free of interfering objects and water spray, which can interrupt reception of GPS satellite signal if the water freezes.
- Also, refer to the antenna installation guidelines page 3.

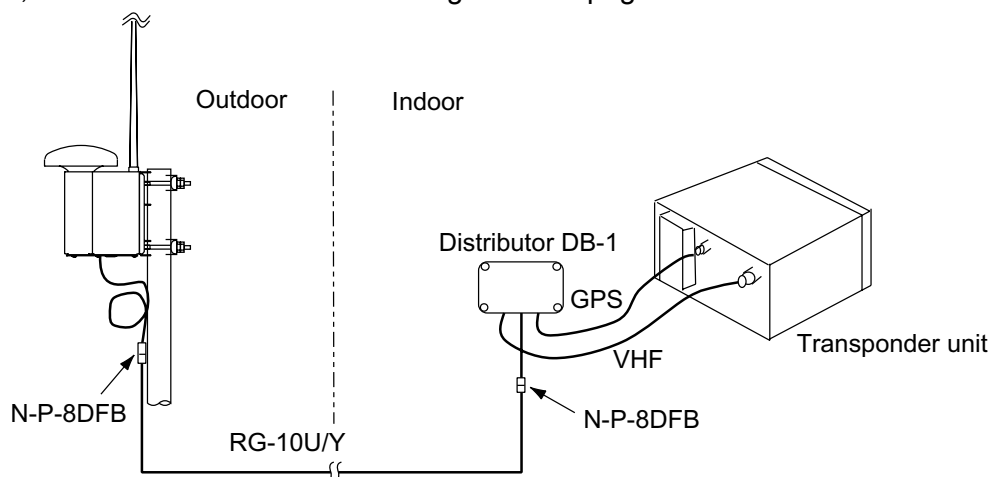


Installation overview of GPS/VHF combined antenna

Note: Optional $\phi 80$ mast mount kit (Type: OP24-5, Code no.: 005-954-510) is required to fix the GPS/VHF combined antenna to the mast ($\phi 60 - 80$).


Mounting procedures

1. Dismount the bottom cover, cut the cable-tie inside the unit and take out the coaxial connector attached to the combined box.
2. Loosen four screws to loosen whip antenna fixture and pull out the coaxial connector coming from the combined box through the hole in the whip antenna fixture.
3. Connect the coaxial connector to the whip antenna base and wrap the junction part of the whip antenna with vulcanizing tape and then vinyl tape for waterproofing.
4. Insert the whip antenna from the top of the combined antenna.
5. Secure the whip antenna with whip antenna fixture.
6. Using a new plastic band (supplied), secure the cables and coaxial connector inside the antenna case.
7. Mount the bottom cover.
8. Fix the GPS/VHF combined antenna to the ship's stanchion (40 to 50 mm diameter) with antenna fixing brackets, flat washers and hex. nuts.

Note: Coat the exposed parts of bolts and nuts with silicon sealant.

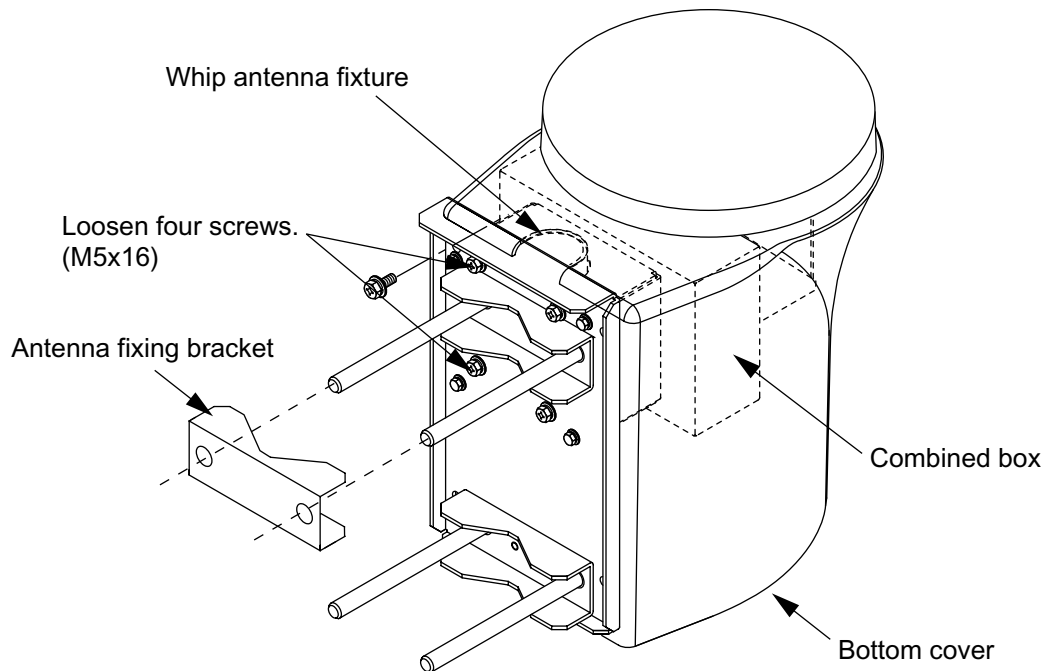


GPS/VHF Combined antenna

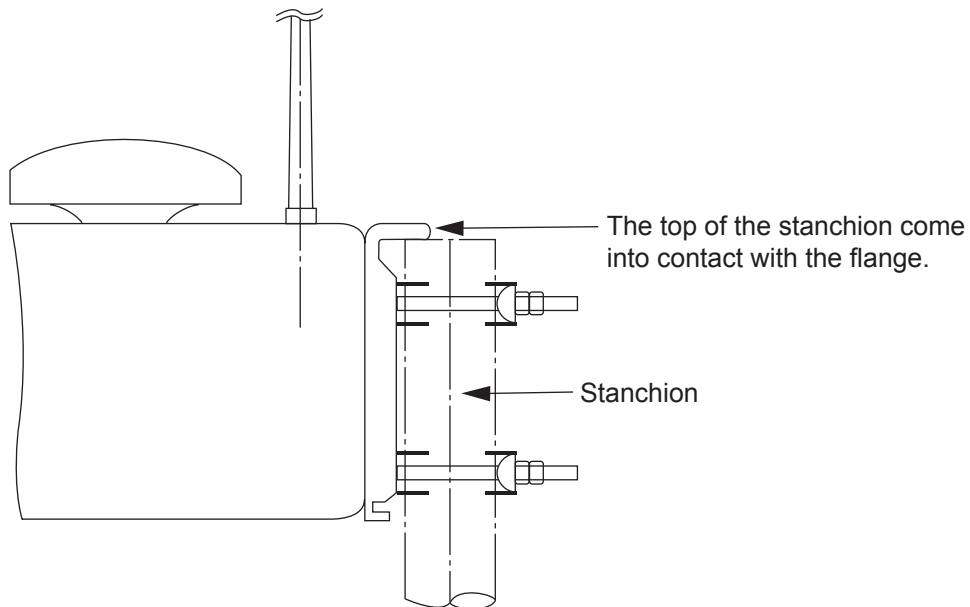

Installing distributor unit DB-1

The length of the cable between the distributor unit and transponder unit is 1 m so locate the distributor unit within 1 m from the transponder unit. Fix the distributor unit on the bulkhead, facing the cable entrance downward. Remove the lid of the distributor unit and secure the unit with two tapping screws.

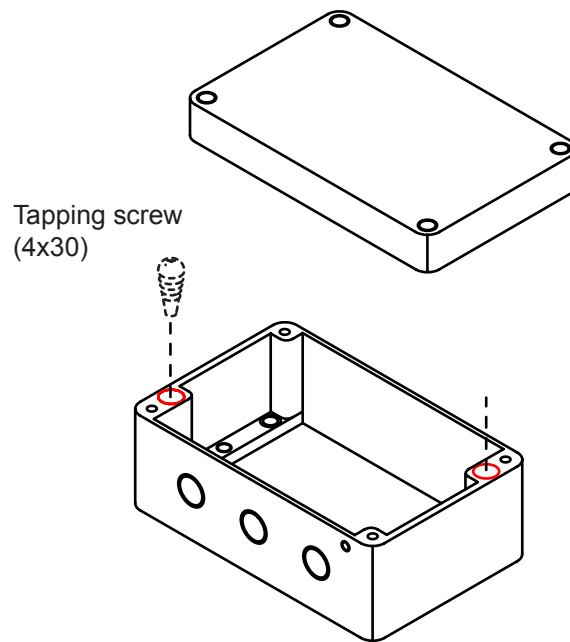

Note: Be sure no foreign material or water enters the distributor unit.

1.2 Transponder Unit

The transponder unit can be installed on a desktop or flush mounted in a panel. Install it on the chart table or near the steering place, referring to the outline drawing.

When selecting a mounting location for the transponder, keep the following in mind:


- Keep the transponder out of direct sunlight.
- The temperature and humidity should be moderate and stable. (Operating temperature range: -15°C to $+55^{\circ}\text{C}$)
- Locate the unit away from exhaust pipes and vents.
- The mounting location should be well ventilated.
- Mount the unit where shock and vibration are minimal.
- Keep the unit away from electromagnetic field generating equipment such as motor, generator.
- For maintenance and checking purposes, leave sufficient space at the sides and rear of the unit and leave slack in cables. Refer to the outline drawing.
- A magnetic compass will be affected if the unit is placed too close to it. Observe the following compass safe distances to prevent disturbance to the magnetic compass:

Standard compass: 1.0 meters


Steering compass: 0.6 meters

Desktop mounting

1. Remove two hex. bolts from the lower part of the transponder unit and dismount the mounting base.

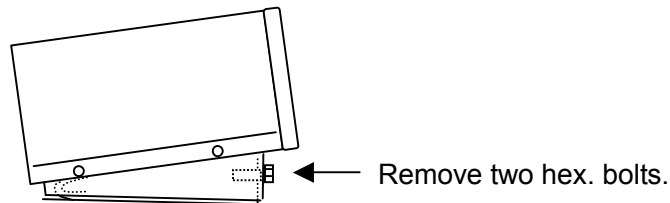

2. Fix the mounting base to the desktop with four tapping screws (6x20: supplied) or hex. bolts.

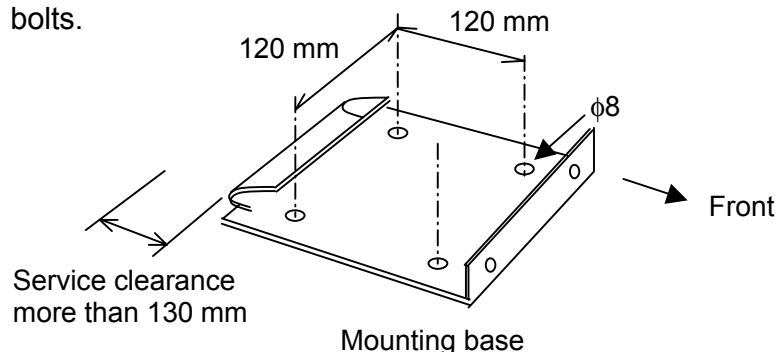

3. Place the transponder unit on the mounting base and secure it with two hex. bolts.

Flush mounting

Optional flush mount kit A or B is required for flush mounting. For mounting dimensions, refer to the outline drawing at the back of this manual.

Flush mount kit A: Type OP24-1 Code no. 005-950-740

| | Name | Type | Code no. | Qty |
|---|----------------|-------------|-------------|-----|
| 1 | Cosmetic panel | 24-003-2811 | 100-299-540 | 1 |
| 2 | +Tapping screw | 5x25 | 000-802-082 | 4 |

1. Cut out a hole in the mounting location, referring to the outline drawing.
2. Remove two hex bolts to dismount the mounting base.
3. Remove six hex bolts from the bottom of the transponder unit to dismount the mounting pedestal.
4. Set the transponder unit to the cosmetic panel and fix them with six hex bolts.
5. Set the assembly (transponder unit and cosmetic panel) to the hole and fix it with four tapping screws (5x25).

Flush mount kit B: Type OP24-2 Code no. 005-950-750

| | Name | Type | Code no. | Qty |
|---|------------------|-------------|-------------|-----|
| 1 | Mounting bracket | 24-003-2821 | 100-299-550 | 1 |
| 2 | Hex bolt | M5x25 | 000-862-125 | 6 |
| 3 | Hex nut | M5 | 000-863-108 | 6 |
| 4 | Flat washer | M5 | 000-864-128 | 6 |
| 5 | Spring washer | M5 | 000-864-258 | 6 |


1. Cut out a hole in the mounting location, referring to the outline drawing.
2. Dismount the mounting base and mounting pedestal from the transponder unit.
3. Set the transponder unit to the hole. Using six hex bolts, attach the mounting bracket at the bottom of the transponder unit from the rear of the flush mounting panel.
4. Fix with six sets of hex bolt, nut, flat washers and spring washers from the rear of the flush mounting panel.

1.3 Junction Box

Mount the junction box where the junction box is protected from rain and water splash.

Mounting

1. Open the lid of the junction box and fix the junction box with four tapping screws (5x20). Avoid bundling the 3.3 m cable of the junction box together with any power cable. This causes malfunction.
2. Connect cables to the terminal board, referring to Chapter 2 and 3.
3. Fix the lid after connecting external equipment.
4. Clamp the cable with several U-type cable clamps (local supply) at suitable intervals.

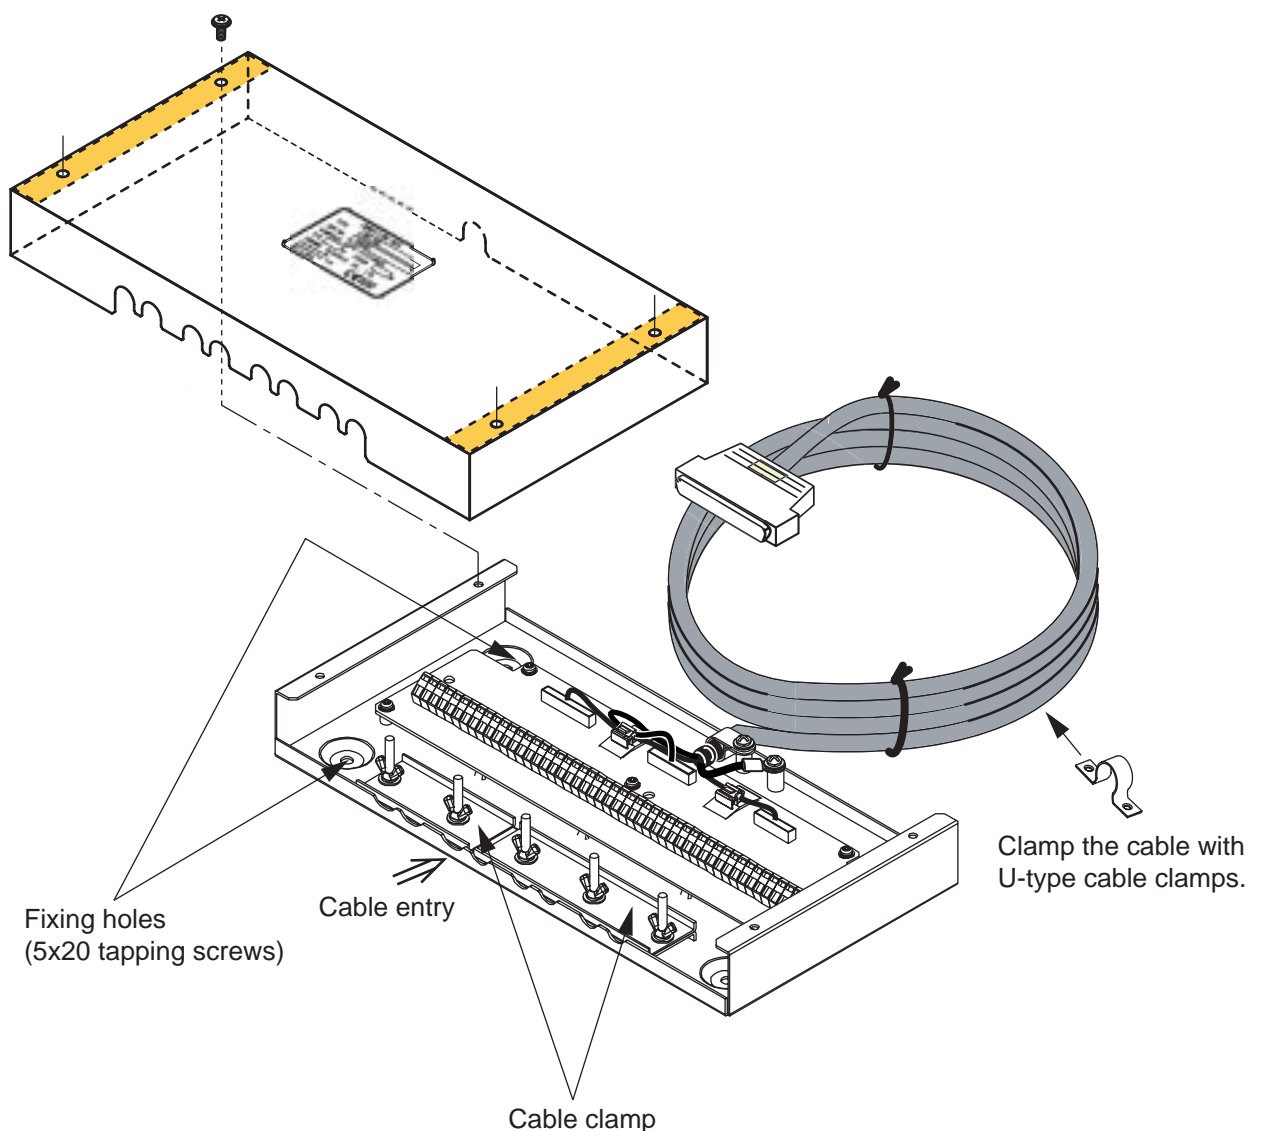

1.4 Power Supply (option)

The length of the power cable between the power supply and the transponder unit is 3.5 m. Keep this length in mind when selecting a mounting location. A longer cable should not be used – voltage drop will result, affecting performance.


When selecting a mounting location for the unit, keep the following in mind:

- Keep the unit out away from areas subject to water splash.
- Locate the unit away from exhaust pipes and vents.
- The mounting location should be well ventilated.
- Mount the unit where shock and vibration are minimal.
- A magnetic compass will be affected if the unit is placed too close to it. Observe the following compass safe distances to prevent disturbance to the magnetic compass:

Steering compass: 0.6 m

Standard compass: 0.9 m

Fix the unit with four tapping screws (4x16) to a desktop or the deck as shown in the figure below. It is not necessary to open the cover.

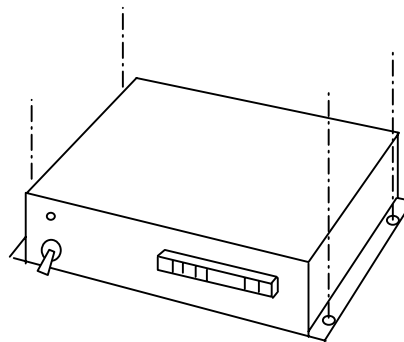


1.5 Pilot Plug (option)

The pilot plug should be mounted near where the pilot steers the ship. This plug is used to connect a PC to display AIS information for use by the pilot. Refer to the outline drawing at the back of this manual for mounting dimensions.

2. WIRING


Connect the equipment, referring to the interconnection diagram at the back this manual.

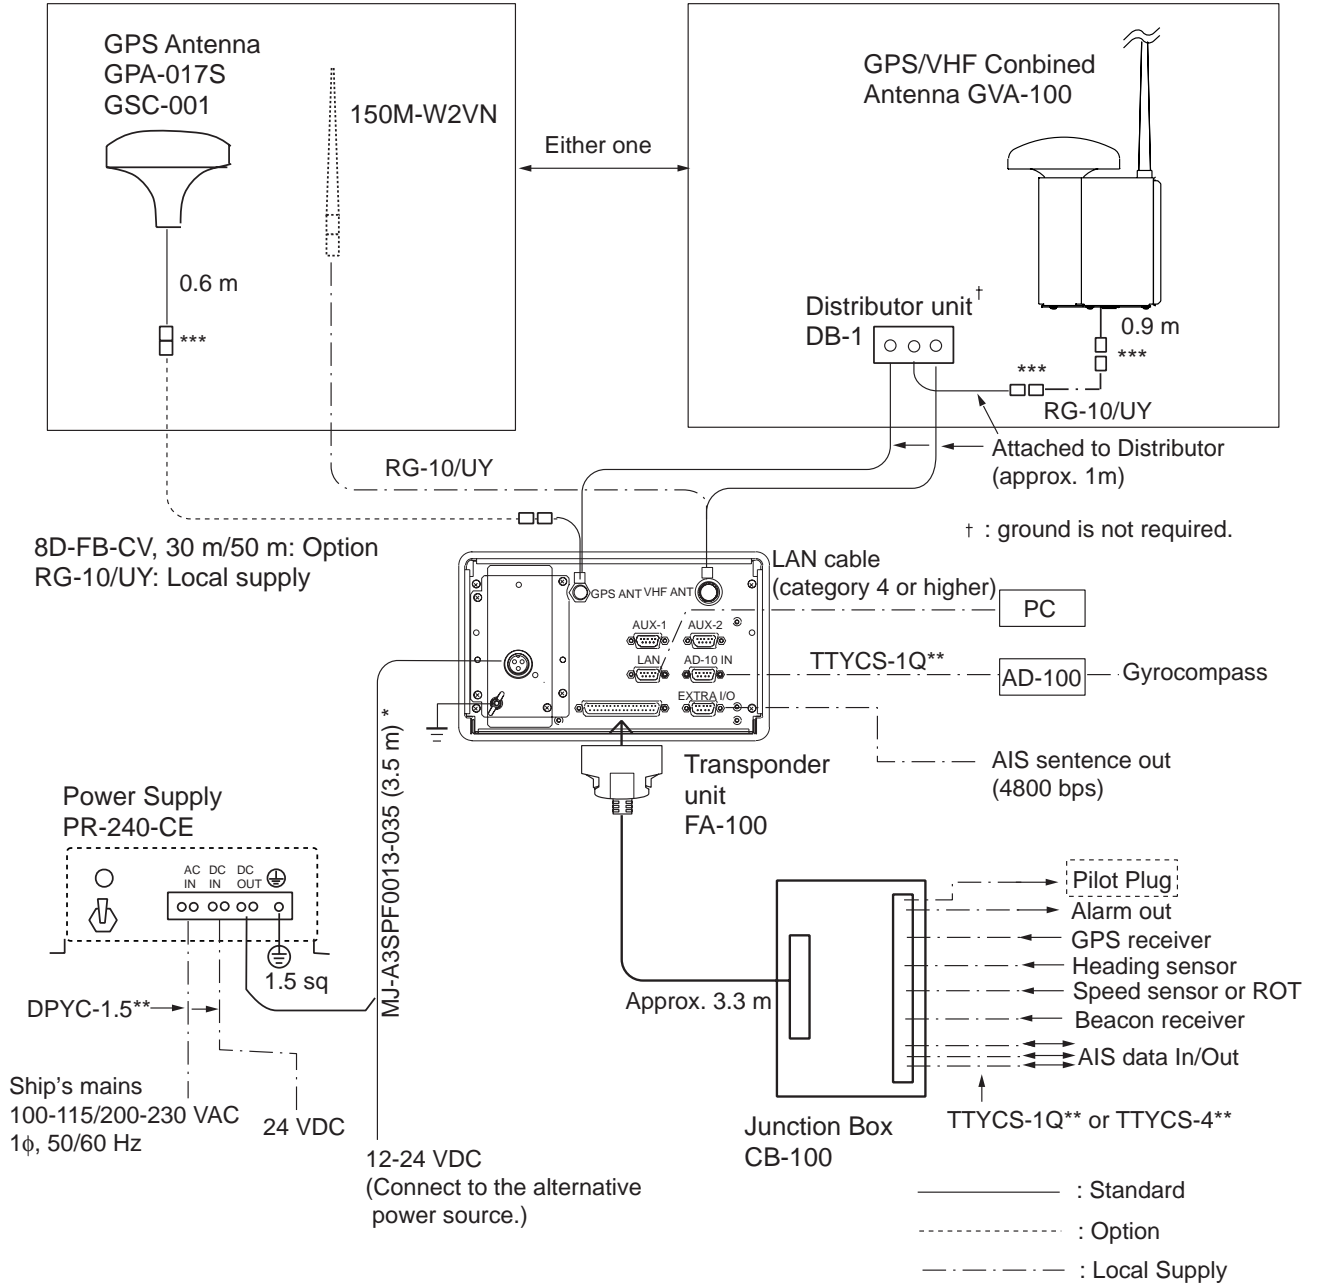


EXTRA IO port: Outputs AIS sentence (4800 bps).
 AUX-1, AUX-2 port: Not used.

** : DPYC-1.5, TTYCS-1Q and TTYCS-4 are Japan Industry Standard cable.
Use them or the equivalents.


DPYC-1.5

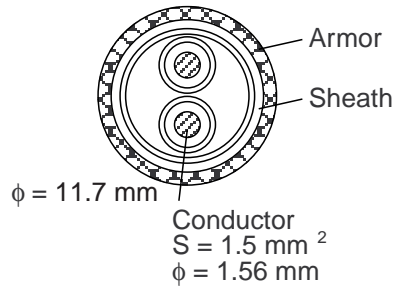

TTYCS-1Q (Four core twisted)

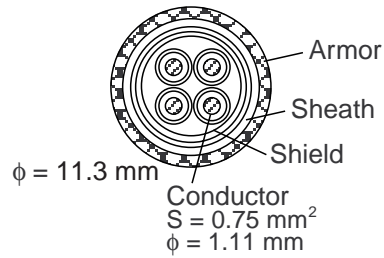

TTYCS-4 (Four twisted pairs)

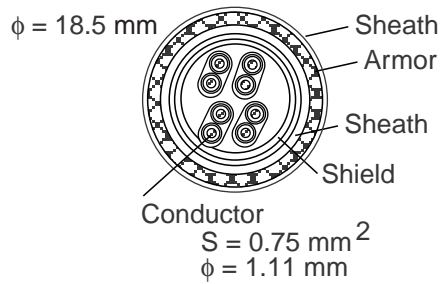

***: Waterproofing connectors


Wrap connector with vulcanizing tape and then vinyl tape. Bind the tape end with a cable-tie.




Waterproofing connector

Cable Connection at Junction Box

Cable fabrication

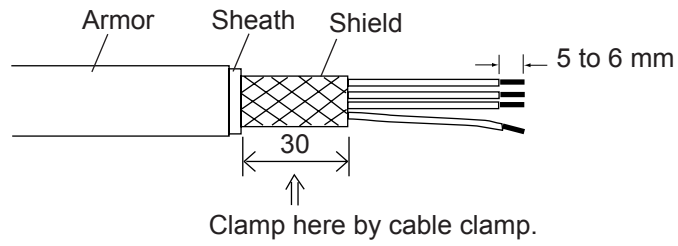

Connection

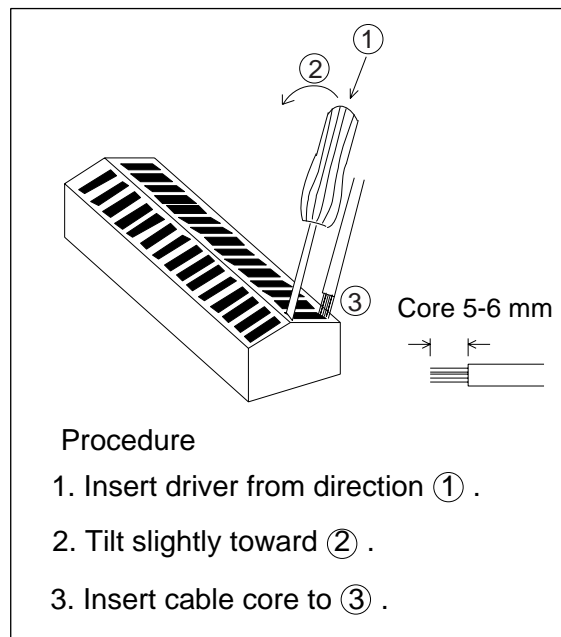


3. INPUT/OUTPUT SIGNAL

3.1 Inputs from Sensors

There are three input ports (SENSOR 1, 2 and 3) which are based on the IEC 61162-1/2. The protocol is RS422. If there is no HDT signal from a gyrocompass, connect the gyrocompass signal (Synchro or step signal) to the "AD-10 IN" port (D-sub 9 pins) of the transponder unit via the FURUNO A/D Converter AD-100 (See page 16).


TB1 in the junction box

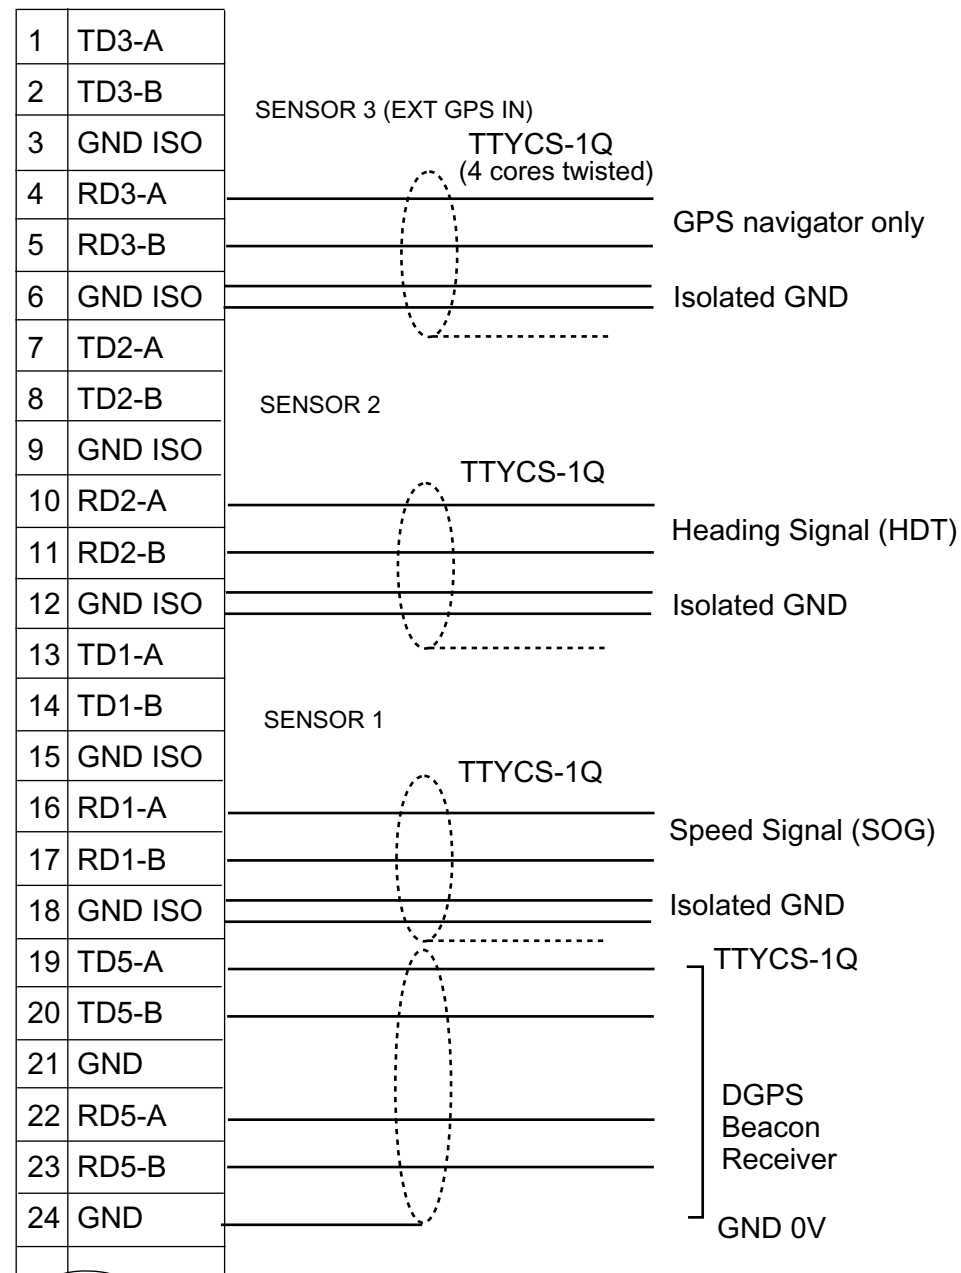

3.2 Input/Output of AIS Signal

Three input/output ports are provided for RS-422 protocol, based on the IEC 61162-1/2. Data transmission rate is selectable from 4800 bps and 38.4 kbps. Normally, Radar/ECDIS/PC, etc. are connected to these ports to exchange data with the AIS. PC standard protocol RS-232C is also provided in the D-sub port of the transponder unit.


TB1 in the junctionbox

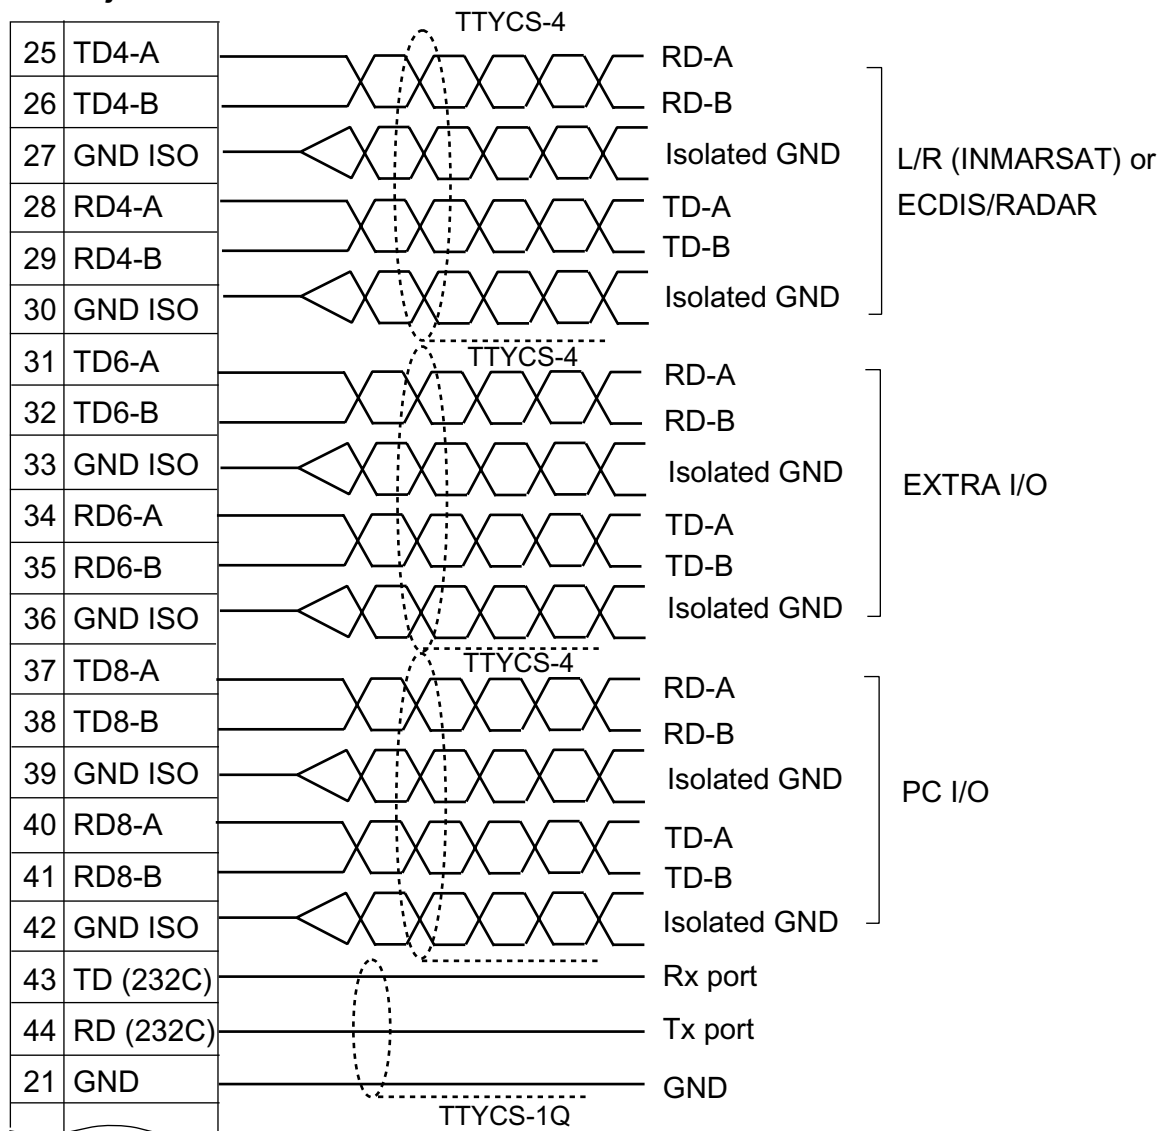

Note: For TD (232C) and RD (232C), use one twisted pair for TD and one twisted pair for RD, separately. Use pin #21 for SG.

3.3 Input of Gyrocompass Signal

If the gyrocompass has no HDT signal, the AD-10 format (FURUNO format) signal can be input via the FURUNO A/D Converter AD-100. Connect the AD-100 to the "AD-10 IN" port (D-sub 9 pin) on the rear panel of the transponder unit.

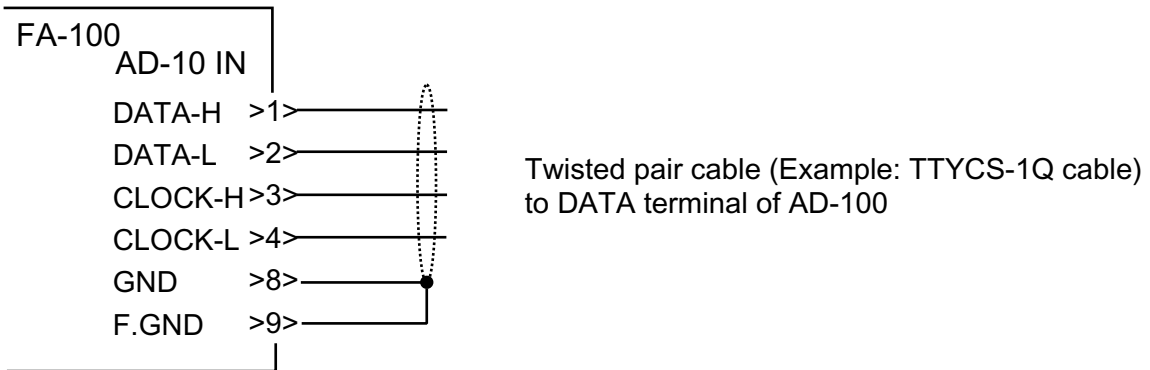

Note: Set data output interval for 200 ms (instead of 25 ms) by internal jumper inside the AD-100.

3.4 Alarm Signal Output

The FA-100 generates an alarm signal (relay contact signal) for hardware failure such as transmitter block or sensor abnormality. For details of alarm type, see the operator's manual.

Two kinds of contact signals, on (normal closure) or off (normal open), are output, and are selected at the junction box CB-100 according to the alarm generator connected. The maximum current and voltage of the contact are 1 A, 125 VAC and 60 VDC. Normally connect to the NC (normal close) between #45 and #47.


TB-1 in the junction box

| | |
|----|-----|
| 45 | AOL |
| 46 | AOH |
| 47 | AOC |

#45-#47: Normal Close
#46-#47: Normal Open
47: common line


3.5 LAN Input/Output

The FA-100 supports Ethernet based on LAN. Its protocol is 10BASE-T and the transmission rate is 10 Mbps. To connect the FA-100 with other equipment (such as a PC), use a LAN cable category 4 or higher with shield (SDT). Connect it to the PC with an RJ-45 connector, and connect to the FA-100 with a D-sub 9 pin connector, to avoid noise leakage. To use a commercial LAN cable, remove one connector and solder a D-sub 9 pin connector, supplied in the installation materials.

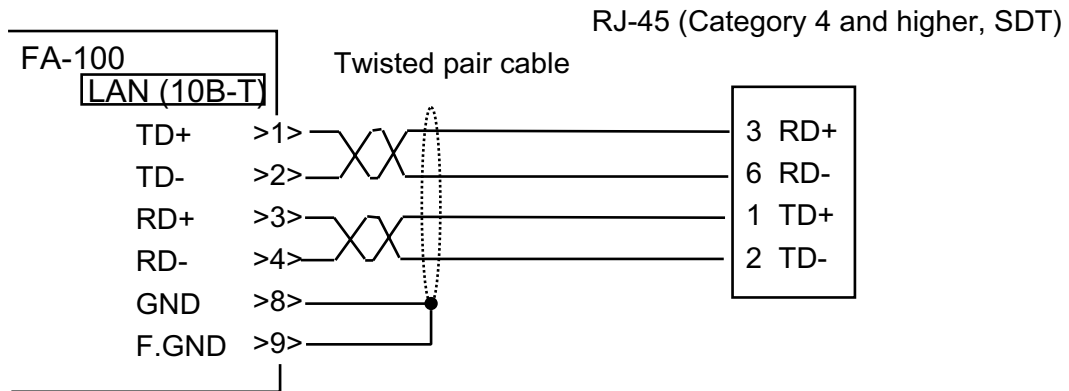

3.6 Pilot Plug

Use the twisted cable TTYCS-4 between the junction box and the pilot plug. The cable between the PC and the pilot plug should be prepared by the ship's pilot.

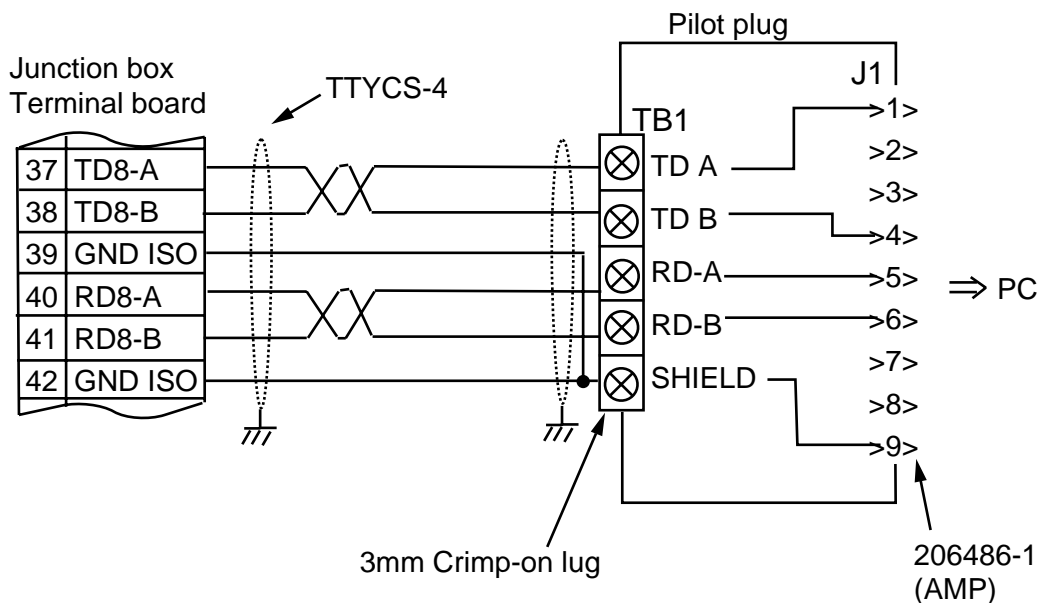


3.7 Jumper Setting in the Junction Box

Each RS-422 RX line (on the PCB 24P0031 in the junction box) has a jumper block with 240 ohms termination resistor. The junction box is shipped with all jumper blocks connected between the #3 and #4 terminals pins, terminating RX lines with 240 ohms. Assuming that an external equipment has the output voltage of ± 5 V, more than 21 mA of output current is required.

If multiple equipment are connected to an output port of an external equipment, change to jumper block setting to between the #1 and #2 pins to reduce the load on the FA-100. Then, the input impedance of the RS-422 RX lines in the FA-100 becomes more than 2.4 k ohms.

We recommend that you leave the connection of the jumper block between #3 and #4 pins if only the FA-100 is connected to an external equipment.

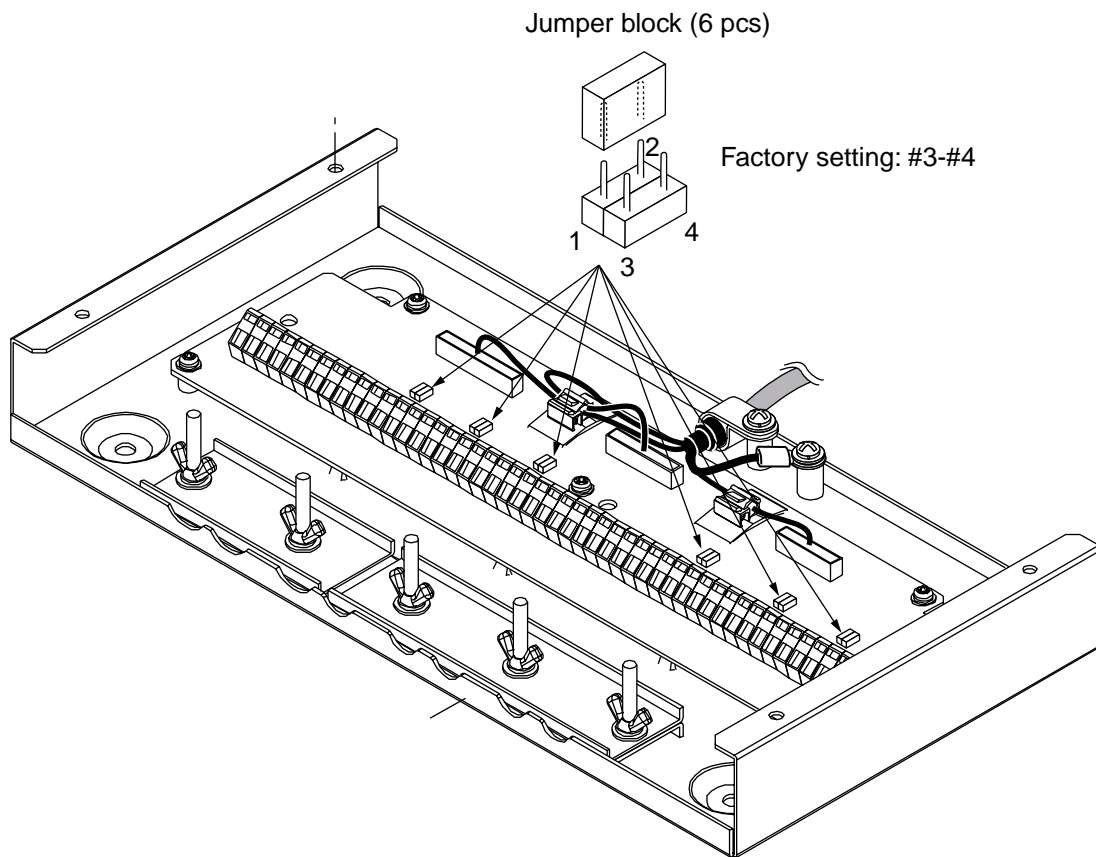

3.8 Input/Output Sentences

1) SENSOR 1, SENSOR2, and SENSOR3 ports

These ports can receive IEC61162-1/2 standard data. The transmission rate of sensor 1, 2, and 3 is selectable from 4800 bps and 38.4 kbps through the menu.

Input sentences are as follows:

\$xxDTM, \$xxGBS, \$xxGGA, \$xxGLL, \$xxGNS, \$xxHDT
\$xxOSD, \$xxRMC, \$xxROT, \$xxVBW, \$xxVTG

Note: The talker of the underlined sentences has priority as follows:

GN>GP>GL>LC>IN

Other sentences disregard talker.

2) PC I/O, LR or ECDIS/RADAR, EXTRA I/O and EXTRA 1 I/O ports

These ports can receive or output IEC61162-1/2 standard data. The transmission rate of signals is selectable from 4800 bps and 38.4 kbps through the menu. The transmission rate of the EXTRA IO port signal is fixed to 4800 bps.

Input sentences are as follows:

\$xxABM, \$xxACA, \$xxACK, \$xxAIR
\$xxBBM, \$xxDTM, \$xxGBS, \$xxGGA
\$xxGLL, \$xxGNS, \$xxHDT, \$xxLRF
\$xxLRI, \$xxOSD, \$xxRMC, \$xxROT
\$xxSSD, \$xxVBW, \$xxVSD, \$xxVTG

Note: The talker of the underlined sentences has priority as follows:

GN>GP>GL>LC>IN

Other sentences disregard talker.


Output sentences are as follows:

\$AIABK, \$AIACA, \$IALR, \$AILRF,
\$AILR1, \$AILR2, \$AILR3, \$AITXT,
\$AIVDM, \$AIVDO

3.9 Changing Ship's Mains Specifications

The power supply PR-240-CE is shipped ready for connection to a 200-230 VAC ship's mains. If the ship's mains is 100 VAC – 115 VAC, change the tap connection and terminal board connection as below. Attach label supplied as accessories to the punch mark in the front panel according to the ship's mains.

| Ship's mains | Tap connection | Terminal board connection #1 & #2 |
|--------------|----------------|-----------------------------------|
| 100-115 VAC | SEL 115 V | b |
| 200-230 VAC | SEL 230 V | a |

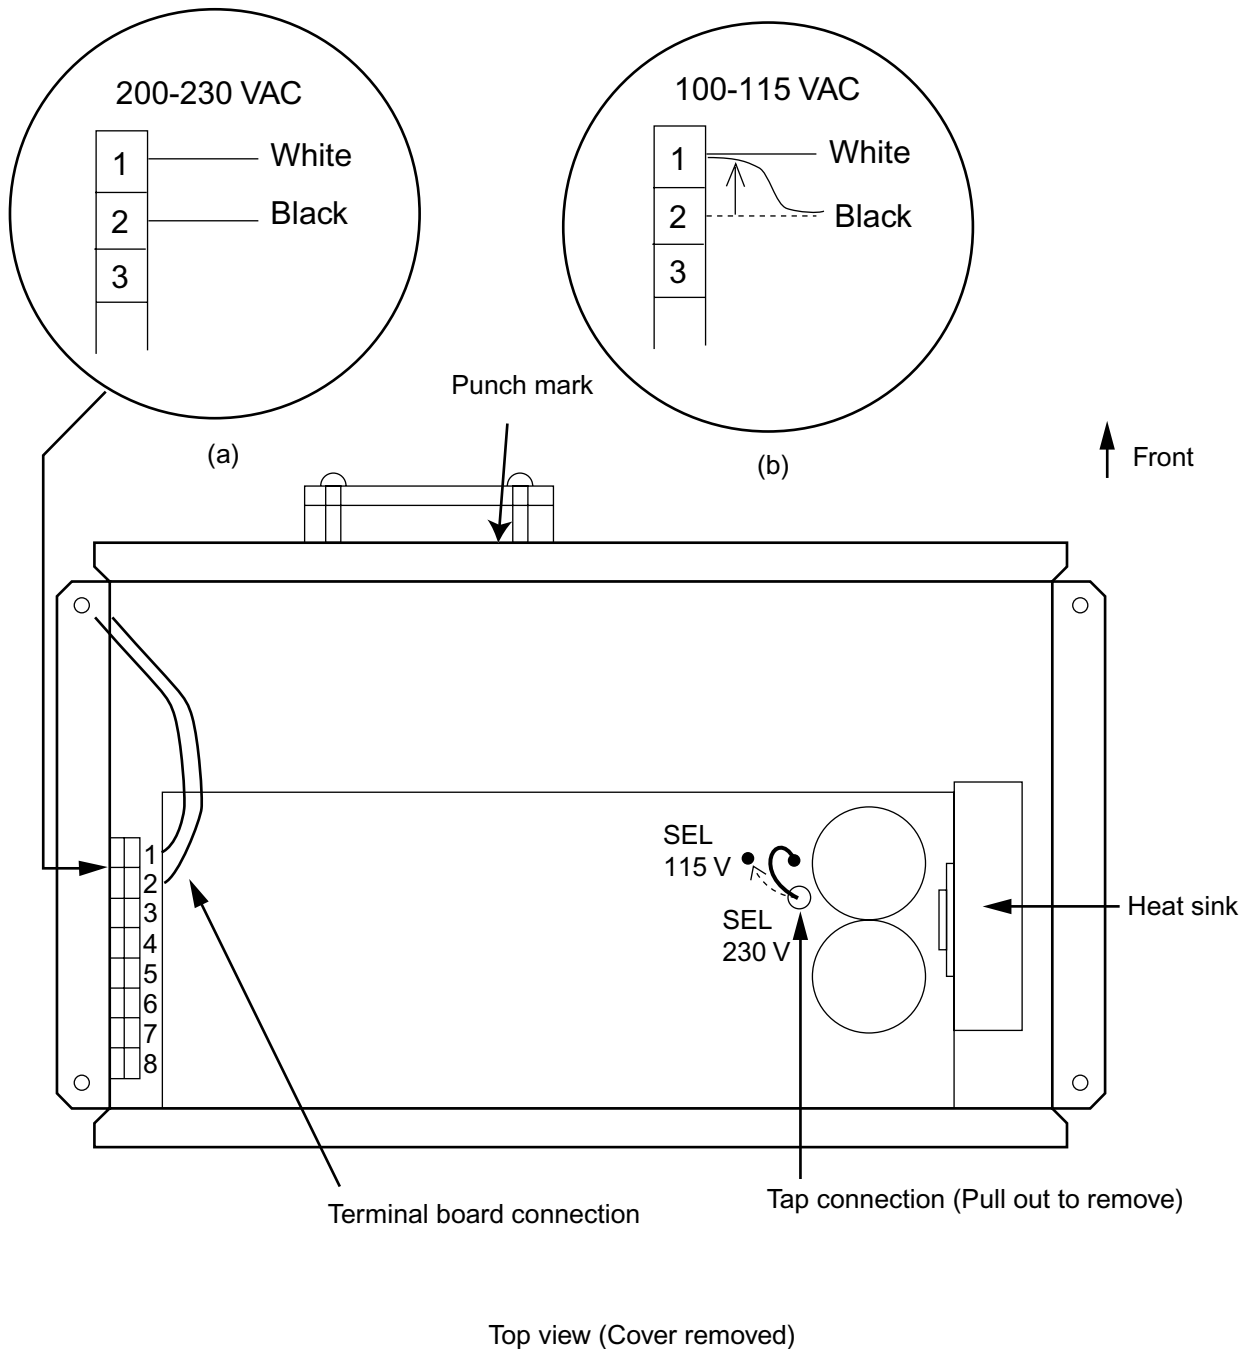

4. SETTING AND ADJUSTMENT

After installing the equipment, set up the own ship's static information (MMSI, IMO number, ship's name, call sign, type of ship and GPS antenna position). Also, set up the system settings.

4.1 Setting MMSI, IMO No., Name and Call Sign

1. While holding down the [0] key, press the [POWER] key.
2. After the following message appears, release the [0] key. (It takes several seconds before the message appears.)

NOW STARTING
CHECKING MEMORY

3. After the following window appears, enter the password. Note that the password is known by only the FURUNO dealer.

[ENTER PASSWORD]
PASSWORD:
■ _____

4. Press the [ENT] key to display the SET MMSI & IMO# window.

Asterisk marks → current selection.

[SET MMSI & IMO#]
* MMSI : _____
IMO# : _____
NAME : _____
C.SIGN : _____


SET: [ENT]

5. Enter ship's MMSI (Maritime Mobile Service Identity) in nine digits.
6. Press the [NEXT] key to select IMO#.
7. Enter ship's IMO number in nine digits. If the IMO number has 7 digits, enter "0" twice followed by IMO#. If the ship has no IMO number, enter all zeroes.
8. Press the [NEXT] key to select NAME.

9. Enter ship's name, using up to 20 alphanumeric characters. To switch between alphabet and numerical character, press the [SFT] key. To enter an alphabet, press corresponding key several times until desired letter is displayed. For example, if you press the [2] key continuously, the character A, B and C appear cyclically. If you want to enter the same letter or an other letter with the same key (for example, AA or AC), press the [6] key while pressing the [SFT] key, to send the cursor to the next position.
10. Press the [NEXT] key to select C.SIGN.
11. Enter call sign, using up to seven alphanumeric characters.
12. Press the [ENT] key to register data. The INIT SETTINGS sub-menu appears.


4.2 Setting GPS Antenna Position and Ship's Type

1. In the INIT SETTING sub-menu, press the [6] key to open the SET ANTENNA POS window.

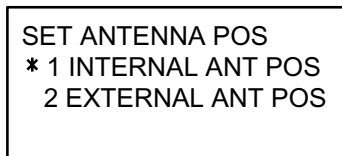


SET ANTENNA POS window

2. With 1 selected, press the [ENT] key. The 1 is for entering internal GPS antenna position and 2 is for external GPS which is connected to the AIS.

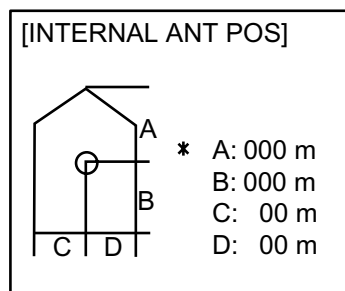

INTERNAL ANT POS window

3. Enter locations of GPS antenna, by using the numeric keys and the [NEXT] key, and finally press the [ENT] key.
 - A: Distance from bow to GPS antenna position
 - B: Distance from stern to GPS antenna position
 - C: Distance from port to GPS antenna position
 - D: Distance from starboard to GPS antenna position
4. Enter external GPS antenna position similar to how you entered internal GPS antenna position.
5. Press the [MENU] key to return to the INIT SETTINGS sub-menu.
6. Press the [4] key to display the SET TYPE&CREW window.

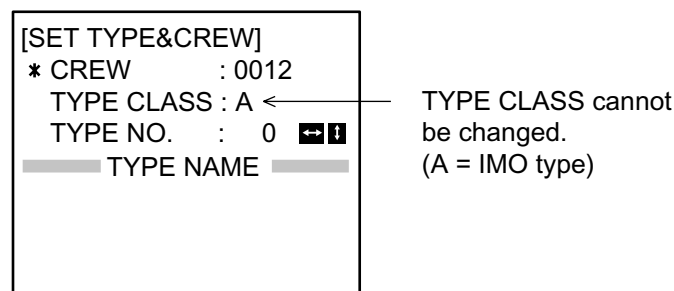

SET TYPE&CREW window

7. Press the [NEXT] key to select TYPE NO.

Confirm type of ship with ship's captain before setting it.

8. Press the [2], [4], [6] or [8] key as appropriate to select your ship's type, referring to the list on below.

| | | | |
|----|---|----|---|
| 10 | FUTURE USE ALL SHIPS OF THIS TYPE | 60 | PASSENGER SHIPS ALL SHIPS OF THIS TYPE |
| 11 | FUTURE USE CARRYING DG, HS, OR MP(A) | 61 | PASSENGER SHIPS CARRYING DG, HS, OR MP(A) |
| 12 | FUTURE USE CARRYING DG, HS, OR MP(B) | 62 | PASSENGER SHIPS CARRYING DG, HS, OR MP(B) |
| 13 | FUTURE USE CARRYING DG, HS, OR MP(C) | 63 | PASSENGER SHIPS CARRYING DG, HS, OR MP(C) |
| 14 | FUTURE USE CARRYING DG, HS, OR MP(D) | 64 | PASSENGER SHIPS CARRYING DG, HS, OR MP(D) |
| 15 | FUTURE USE FUTURE USE | 65 | PASSENGER SHIPS FUTURE USE |
| 16 | FUTURE USE FUTURE USE | 66 | PASSENGER SHIPS FUTURE USE |
| 17 | FUTURE USE FUTURE USE | 67 | PASSENGER SHIPS FUTURE USE |
| 18 | FUTURE USE FUTURE USE | 68 | PASSENGER SHIPS FUTURE USE |
| 19 | FUTURE USE NONE | 69 | PASSENGER SHIPS NONE |
| 20 | WIG ALL SHIPS OF THIS TYPE | 70 | CARGO SHIPS ALL SHIPS OF THIS TYPE |
| 21 | WIG CARRYING DG, HS, OR MP(A) | 71 | CARGO SHIPS CARRYING DG, HS, OR MP(A) |
| 22 | WIG CARRYING DG, HS, OR MP(B) | 72 | CARGO SHIPS CARRYING DG, HS, OR MP(B) |
| 23 | WIG CARRYING DG, HS, OR MP(C) | 73 | CARGO SHIPS CARRYING DG, HS, OR MP(C) |
| 24 | WIG CARRYING DG, HS, OR MP(D) | 74 | CARGO SHIPS CARRYING DG, HS, OR MP(D) |
| 25 | WIG FUTURE USE | 75 | CARGO SHIPS FUTURE USE |
| 26 | WIG FUTURE USE | 76 | CARGO SHIPS FUTURE USE |
| 27 | WIG FUTURE USE | 77 | CARGO SHIPS FUTURE USE |
| 28 | WIG FUTURE USE | 78 | CARGO SHIPS FUTURE USE |
| 29 | WIG NONE | 79 | CARGO SHIPS NONE |
| 30 | FISHING | 80 | TANKER ALL SHIPS OF THIS TYPE |
| 31 | TOWING | 81 | TANKER CARRYING DG, HS, OR MP(A) |
| 32 | LENGTH OF THE TOW EXCEEDS 200M OR BREADTH EXCEEDS 25M | 82 | TANKER CARRYING DG, HS, OR MP(B) |
| 33 | ENGAGED IN DREDGING OR UNDERWATER OPERATIONS | 83 | TANKER CARRYING DG, HS, OR MP(C) |
| 34 | ENGAGED IN DIVING OPEARATIONS | 84 | TANKER CARRYING DG, HS, OR MP(D) |
| 35 | ENGAGED IN MILITARY OPEARATIONS | 85 | TANKER FUTURE USE |
| 36 | SAILING | 86 | TANKER FUTURE USE |
| 37 | PLEASURE CRAFT | 87 | TANKER FUTURE USE |
| 38 | FUTURE USE | 88 | TANKER FUTURE USE |
| 39 | FUTURE USE | 89 | TANKER NONE |
| 40 | HSC ALL SHIPS OF THIS TYPE | 90 | OTHER TYPE OF SHI ALL SHIPS OF THIS TYPE |
| 41 | HSC CARRYING DG, HS, OR MP(A) | 91 | OTHER TYPE OF SHI CARRYING DG, HS, OR MP(A) |
| 42 | HSC CARRYING DG, HS, OR MP(B) | 92 | OTHER TYPE OF SHI CARRYING DG, HS, OR MP(B) |
| 43 | HSC CARRYING DG, HS, OR MP(C) | 93 | OTHER TYPE OF SHI CARRYING DG, HS, OR MP(C) |
| 44 | HSC CARRYING DG, HS, OR MP(D) | 94 | OTHER TYPE OF SHI CARRYING DG, HS, OR MP(D) |
| 45 | HSC FUTURE USE | 95 | OTHER TYPE OF SHI FUTURE USE |
| 46 | HSC FUTURE USE | 96 | OTHER TYPE OF SHI FUTURE USE |
| 47 | HSC FUTURE USE | 97 | OTHER TYPE OF SHI FUTURE USE |
| 48 | HSC FUTURE USE | 98 | OTHER TYPE OF SHI FUTURE USE |
| 49 | HSC NONE | 99 | OTHER TYPE OF SHI NONE |
| 50 | PILOT | | |
| 51 | SEACH AND RESCURE VESSELS | | WIG: Wing in ground |
| 52 | TUGS | | HSC: High speed craft |
| 53 | PORT TENDERS | | DG: Dangerous goods |
| 54 | VESSELS WITH ANTI-POLUUTION FACILITIES OR EQUIPMENT | | HS: Harmful substances |
| 55 | LAW ENFOREMENT VESSELS | | MP: Marine pollutants |
| 56 | SPARE-FOR ASSIGNMENTS TO LOCAL VESSELS | | 0-9: Undefined |
| 57 | SPARE-FOR ASSIGNMENTS TO LOCAL VESSELS | | |
| 58 | MEDICAL TRANSPORTS | | |
| 59 | SHIPS ACCORDING TO RESOLUTION NO 18 | | |

9. Press the [ENT] key to return to the INIT SETTING sub-menu.

10. Press the [MENU] key. The SAVE confirmation window appears.

```

SAVE ?
* YES
NO
CANCEL
    
```

SAVE confirmation window

11. With YES selected, press the [ENT] key to save the data.

4.3 System Settings

1. Press the [MENU] key to open the main menu.
2. Press the [6] key to open the SYSTEM SETTINGS sub-menu.

```

[SYSTEM SETTINGS]
* 1 SET I/O PORT
  2 SET CHANNEL
  3 SET LR MODE
  4 SET OTHER I/O
  5 SET BUZZER
    
```

SYSTEM SETTINGS sub-menu


3. Press the [1] key to display the SET I/O PORT sub-menu.

```

[SET I/O PORT]
* 1 I/O SPEED
  2 I/O FUNCTION
  3 I/O PRIORITY
  4 SET LAN (IP ADDR)
    
```

SET I/O PORT sub-menu

4. Press the [1] key to display the I/O SPEED window.

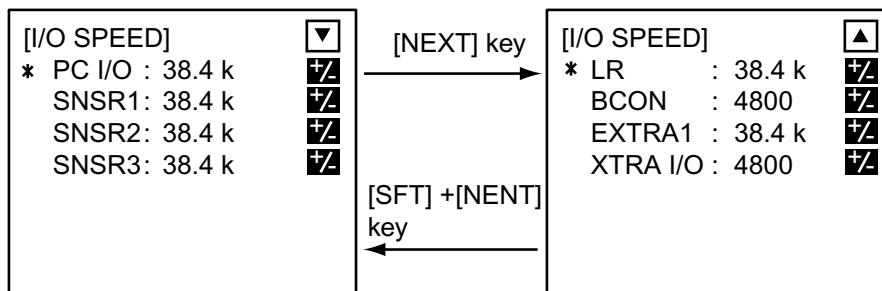

I/O SPEED window

5. Select the appropriate data transmission rate from 4800 bps and 38.4 kbps for PC I/O, SNSR 1, SNSR 2, SNSR 3, LR, BCON (beacon receiver), EXTRA1 and EXTRA2, by pressing the [SFT] key. To select each item, press the [NEXT] key. To go backward, press the [NEXT] key while pressing the [SFT] key.
6. Press the [ENT] key to return to the SET I/O PORT sub-menu.
7. Press the [2] key to display the I/O FUNCTION window.

```

[I/O FUNCTION]
PORT LR: EXT DISP +/

```

I/O FUNCTION window

8. Press the [SFT+/-] key to select EXT DISP or LR, depending on equipment connected.
EXT DISP: External display, such as radar, ECDIS
LR: Long range communication, such INMARSAT communication equipment
9. Press the [ENT] key to return to the SET I/O PORT sub-menu.
10. Press the [3] key to display the I/O PRIORITY window.

```

[I/O PRIORITY]
* 1 L/L   COG   SOG
  2 HDG
  3 ROT
  4 AIS

```

I/O PRIORITY window

11. Press the [1] key to display the L/L COG SOG window.

```

[L/L COG SOG]
* SN1: 1   SN2: 2
  SN3: 3
  EX1: 4   LR : 5
  PC : 6   LAN: 7

  DEFAULT: [CLR]

```

L/L/COG/SOG PRIORITY window


12. Set L/L position, COG and SOG data priority with the numeric keys according to sensors connected.

COG: Course over ground

SOG: Speed over ground

13. Press the [ENT] key to return to the I/O PRIORITY window.

Note: If you have entered 8, 9 or the same value for more than one item at step 12, the following error message appears. In this case, press the [ENT] key and set the priority correctly.

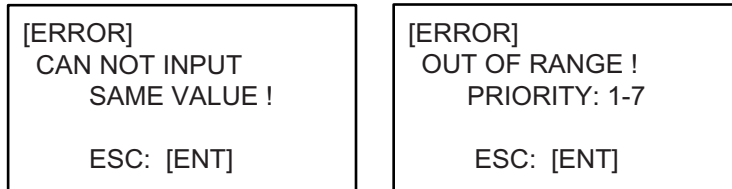


ERROR message

14. Set the priority for HDG and ROT similar to how you did for “L/L COG SOG”.

The priority of heading data entered from the AD-10 IN port is the lowest.

15. To set the priority of AIS, press the [4] key to choose AIS.

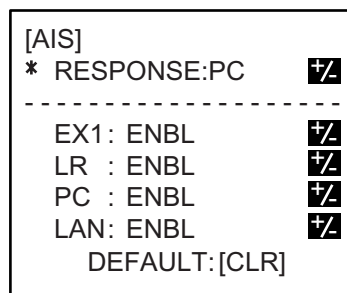

AIS PRIORITY setting window

16. With RESPONSE selected, press the [SFT] key to select PC, NONE, LAN, EX1 or LR as appropriate.

Set an output port for response from other party after you transmit messages or interrogation from the PC, ECDIS, LR, or LAN.

NONE : No output for response

PC : Output to PC I/O port

LAN : Output to LAN port

LR : Output to LR or ECDIS/RADAR port

EX1 : Output to EXTRA1 port

The PC I/O port provides RS-422 and RS-232C terminals. For example, to connect a PC for pilot, connect it to the RS-422 terminal and set 34.8 Kbps for bit rate on the PC I/O option in the I/O SPEED window.

17. Press the [NEXT] key to select EX1, LR, PC or LAN.

18. Press the [SFT] key to select ENBL (enable) or DSBL (disable) as appropriate.

This setting is for communication between FA-100 and each external equipment.

“DSBL” disables communication with selected item.

19. Press the [ENT] key and then [MENU] key to return to the SET I/O PORT sub-menu.

20. Press [4] key to display the SET LAN (IP ADRS) window.

```
[SET LAN (IP ADRS)]
* IP ADDRESS:
  000-000-000-000
SUB NET MASK:
  000-000-000-000

PORT NO. 10000
```

SET LAN (IP ADDR) window

21. If the FA-100 is connected to a network, enter IP address, sub net mask and port number with the numeric keys and the [NEXT] key.

22. Press the [ENT] key and then the [MENU] key to return to the SYSTEM SETTINGS sub-menu.

23. Press the [4] key to display the SET OTHER I/O window.

```
[SET OTHER I/O]
* AD-10: DSBL
  ROT : 01 SEC
```

SET OTHER I/O window

24. Select or set other I/O as follows.

- 1) AD-10: Select ENBL to use AD-10 format gyrocompass signal.
- 2) ROT: Set smoothing time (1 to 10 seconds) of the ship's rate of turn if you are using a ROT meter. This time is used to smooth the variations of data from the AD-100 for calculation of ROT.
- 3) Press the [ENT] key to register setting. The display returns to the SYSTEM SETTINGS sub-menu.

25. Press the [MENU] key. The following confirmation window appears.

```
SAVE ?
* YES
  NO
  CANCEL
```

SAVE confirmation window




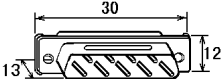
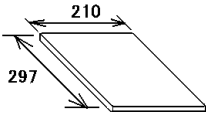
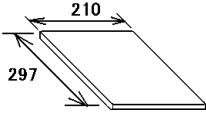
26. Select YES and press the [ENT] key. The main menu appears.

This page is intentionally left blank.

PACKING LIST

24AA-X-9854 -1 1/1

FA-100-J/E, FA-100-J/E-HK
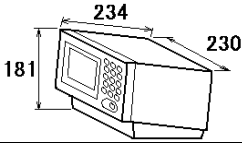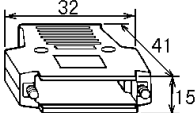
| NAME | OUTLINE | DESCRIPTION/CODE | Q'TY |
|---------------------------------------|---|---------------------------------|------|
| ユニット UNIT | | | |
| トランスポンダ部 TRANSPONDER UNIT |  | FA-100 000-053-889 ** | 1 |
| 工事材料 INSTALLATION MATERIALS | | CP24-00102 | |
| コネクタフード (XM2) HOUSING CASE |  | XM2S-0912 000-145-422 | 1 |
| ケーブル組品MJ CABLE ASSY. |  | MJ-A3SPF0015-035 000-137-340 | 1 |
| コネクタ (XM2) CONNECTOR (XM2) |  | XM2A-0901 000-111-785 | 1 |
| 図書 DOCUMENT | | | |
| 装備要領書 INSTALLATION MANUAL |  | IMJ-44170- * 000-809-324 ** | 1 |
| 取扱説明書 OPERATOR'S MANUAL |  | OMJ-44170- * 000-809-322 ** | 1 |

1.コード番号末尾の[**]は、選択品の代表型式/コードを表します。
CODE NUMBER ENDED BY "**" INDICATES THE NUMBER OF TYPICAL MATERIAL.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)



24AA-X-9854

PACKING LIST

24AA-X-9851 -6 1/1

A-2

CB-100-A/-A-HK/-A-R/-A-MSA
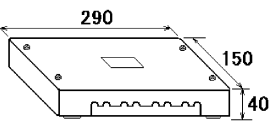
| NAME | OUTLINE | DESCRIPTION/CODE No. | QTY |
|------------------------------------|---|----------------------|-----|
| ユニット UNIT | | | |
| 接続箱 JUNCTION BOX |  | CB-100-A | 1 |
| | | 000-053-907-00 ** | |
| 工事材料 INSTALLATION MATERIALS | | | |
| 工事材料 INSTALLATION MATERIALS |  | CP05-08701 | 1 |
| | | 005-949-280-00 | |

1.コード番号末尾の[**]は、選択品の代表型式/コードを表します。
 DOUBLE ASTERISK DENOTES COMMONLY USED EQUIPMENT.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。
 TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.



(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

PACKING LIST

24AC-X-9870 -1 1/1

A-3

GVA-100-T/-HK
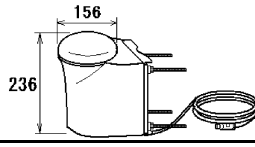
| NAME | OUTLINE | DESCRIPTION/CODE No. | Q'TY |
|------------------------------------|---|----------------------|------|
| ユニット UNIT | | | |
| 複合空中線部 GPS/VHF COMBINED ANTENNA |  | GVA-100-T/HK | 1 |
| | | 000-041-942-00 ** | |
| 工事材料 INSTALLATION MATERIALS | | | |
| 工事材料 INSTALLATION MATERIALS |  | CP24-00141 | 1 |
| | | 001-176-030-00 | |

コード番号末尾の[**]は、選択品の代表コードを表します。

CODE NUMBER ENDING WITH "**" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。




TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

C4431-Z19-B

FURUNO
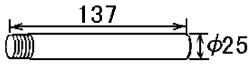
| | | |
|----------|----------------|----------------|
| CODE NO. | 004-365-780-00 | 14BN-X-9403 -7 |
| TYPE | CP20-01111 | 1/1 |

| 工事材料表 INSTALLATION MATERIALS | | | | | |
|---------------------------------|-----------------------------|---|-------------------------|------------|------------------|
| 番号 NO. | 名称 NAME | 略図 OUTLINE | 型名/規格 DESCRIPTIONS | 数量 Q'TY | 用途/備考 REMARKS |
| 1 | ハ°イ° PIPE |  | 20-007-3011-4 | 1 | |
| | | | CODE NO. 100-183-264-10 | | |
| 2 | 取付補助金具 INSTALLING SPACER |  | 20-007-3012-1 ROHS | 1 | |
| | | | CODE NO. 100-183-271-10 | | |
| 3 | ホースクランプ HOSE CLAMP |  | NO. 6348 | 2 | |
| | | | CODE NO. 000-166-005-10 | | |

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.



(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO ELECTRIC CO., LTD.

C3446-M01-J

P A C K I N G L I S T

PR-240/-CE-MSA
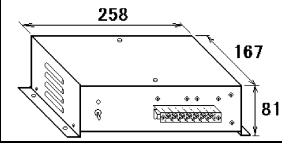
| N A M E | O U T L I N E | DESCRIPTION/CODE No. | Q' TY |
|--------------------------------|---|------------------------------|-------|
| ユニット UNIT | | | |
| AC-DC電源 POWER SUPPLY UNIT |  | PR-240 000-013-636-00 ** | 1 |
| 工事材料 INSTALLATION MATERIALS | | | |
| 工事材料 INSTALLATION MATERIALS |  | CP24-00151 005-931-190-00 | 1 |

コード番号末尾の[**]は、選択品の代表コードを表します。

CODE NUMBER ENDING WITH "**" INDICATES THE CODE NUMBER OF REPRESENTATIVE MATERIAL.

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO

| CODE NO. | | 20AG-X-9404 -4 | | | |
|--------------------|--------------------------------------|--|---|------------|----------------------|
| TYPE | | 1/1 | | | |
| 明細書 DESCRIPTION | | | | | |
| 番号 NO. | 名称 NAME | 略図 OUTLINE | 型名/規格 DESCRIPTIONS | 数量 Q'TY | 用途/備考 REMARKS |
| 1 | アンテナケーブル組品 ANTENNA CABLE ASSY. |  L=30M | 8D-FB-CV *30M* CODE NO. 000-167-889-11 | 1 | 選択 BE SELECTED TO |
| 2 | アンテナケーブル組品 ANTENNA CABLE ASSEMBLY |  L=40M | 8D-FB-CV 40M CODE NO. 000-167-890-12 | 1 | 選択 BE SELECTED TO |
| 3 | アンテナケーブル組品 ANTENNA CABLE ASSY. |  L=50M | 8D-FB-CV *50M* CODE NO. 000-168-241-11 | 1 | 選択 BE SELECTED TO |

型式/コード番号が2段の場合、下段より上段に代わる過渡期品であり、どちらかが入っています。なお、品質は変わりません。

TWO TYPES AND CODES MAY BE LISTED FOR AN ITEM. THE LOWER PRODUCT MAY BE SHIPPED IN PLACE OF THE UPPER PRODUCT. QUALITY IS THE SAME.

(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)





☆

FURUNO ELECTRIC CO., LTD.

C0014-M19-G

FURUNO

| | | |
|----------|----------------|----------------|
| CODE NO. | 004-372-420-00 | 20AG-X-9405 -7 |
| TYPE | CP20-01701 | 1/1 |
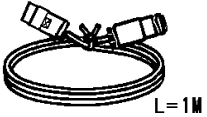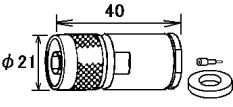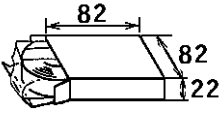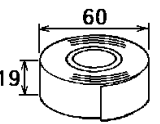
| 工事材料表 INSTALLATION MATERIALS | | | | | |
|---------------------------------|--|--|---|------------|------------------|
| 番号 NO. | 名称 NAME | 略図 OUTLINE | 型名/規格 DESCRIPTIONS | 数量 Q'TY | 用途/備考 REMARKS |
| 1 | 変換ケーブル組品 ADAPTOR CABLE ASSEMBLY |  | NJ-TP-3DXV-1 CODE NO. 001-248-160-00 | 2 | |
| 2 | コネクタ(N) COAXIAL CONNECTOR *N TYPE* |  | N-P-8DFB-1-CF CODE NO. 000-156-918-10 | 1 | |
| 3 | 絶縁テープ INSULATION TAPE |  | Uテープ 0.5X19X5M CODE NO. 000-165-833-10 | 1 | |
| 4 | ビニールテープ VINYL TAPE |  | V360K01 CODE NO. 000-177-579-10 | 1 | |




(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

FURUNO ELECTRIC CO., LTD.

C0014-M20-L


FURUNO

| | | |
|----------|-------------|-----------------------|
| CODE NO. | 004-365-780 | 20AG-X-9403 -1 1/1 |
| TYPE | CP20-01111 | |
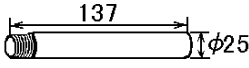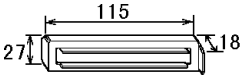
| 工事材料表 INSTALLATION MATERIALS | | マスト取付金具 MAST FIXTURE | | | |
|---------------------------------|-----------------------------|---|-----------------------|------------|------------------|
| 番号 NO. | 名称 NAME | 略図 OUTLINE | 型名/規格 DESCRIPTIONS | 数量 Q'TY | 用途/備考 REMARKS |
| 1 | パイプ PIPE |  | 20-007-3011-2 | 1 | |
| | | | CODE NO. 100-183-262 | | |
| 2 | 取付補助金具 INSTALLING SPACER |  | 20-007-3012-1 | 1 | |
| | | | CODE NO. 100-183-271 | | |
| 3 | ハーカクランプ HOSE CLAMP |  | NO.6348 SUS303 | 2 | |
| | | | CODE NO. 000-805-906 | | |

20AG-X-9403

FURUNO ELECTRIC CO., LTD.
(略図の寸法は、参考値です。 DIMENSIONS IN DRAWING FOR REFERENCE ONLY.)

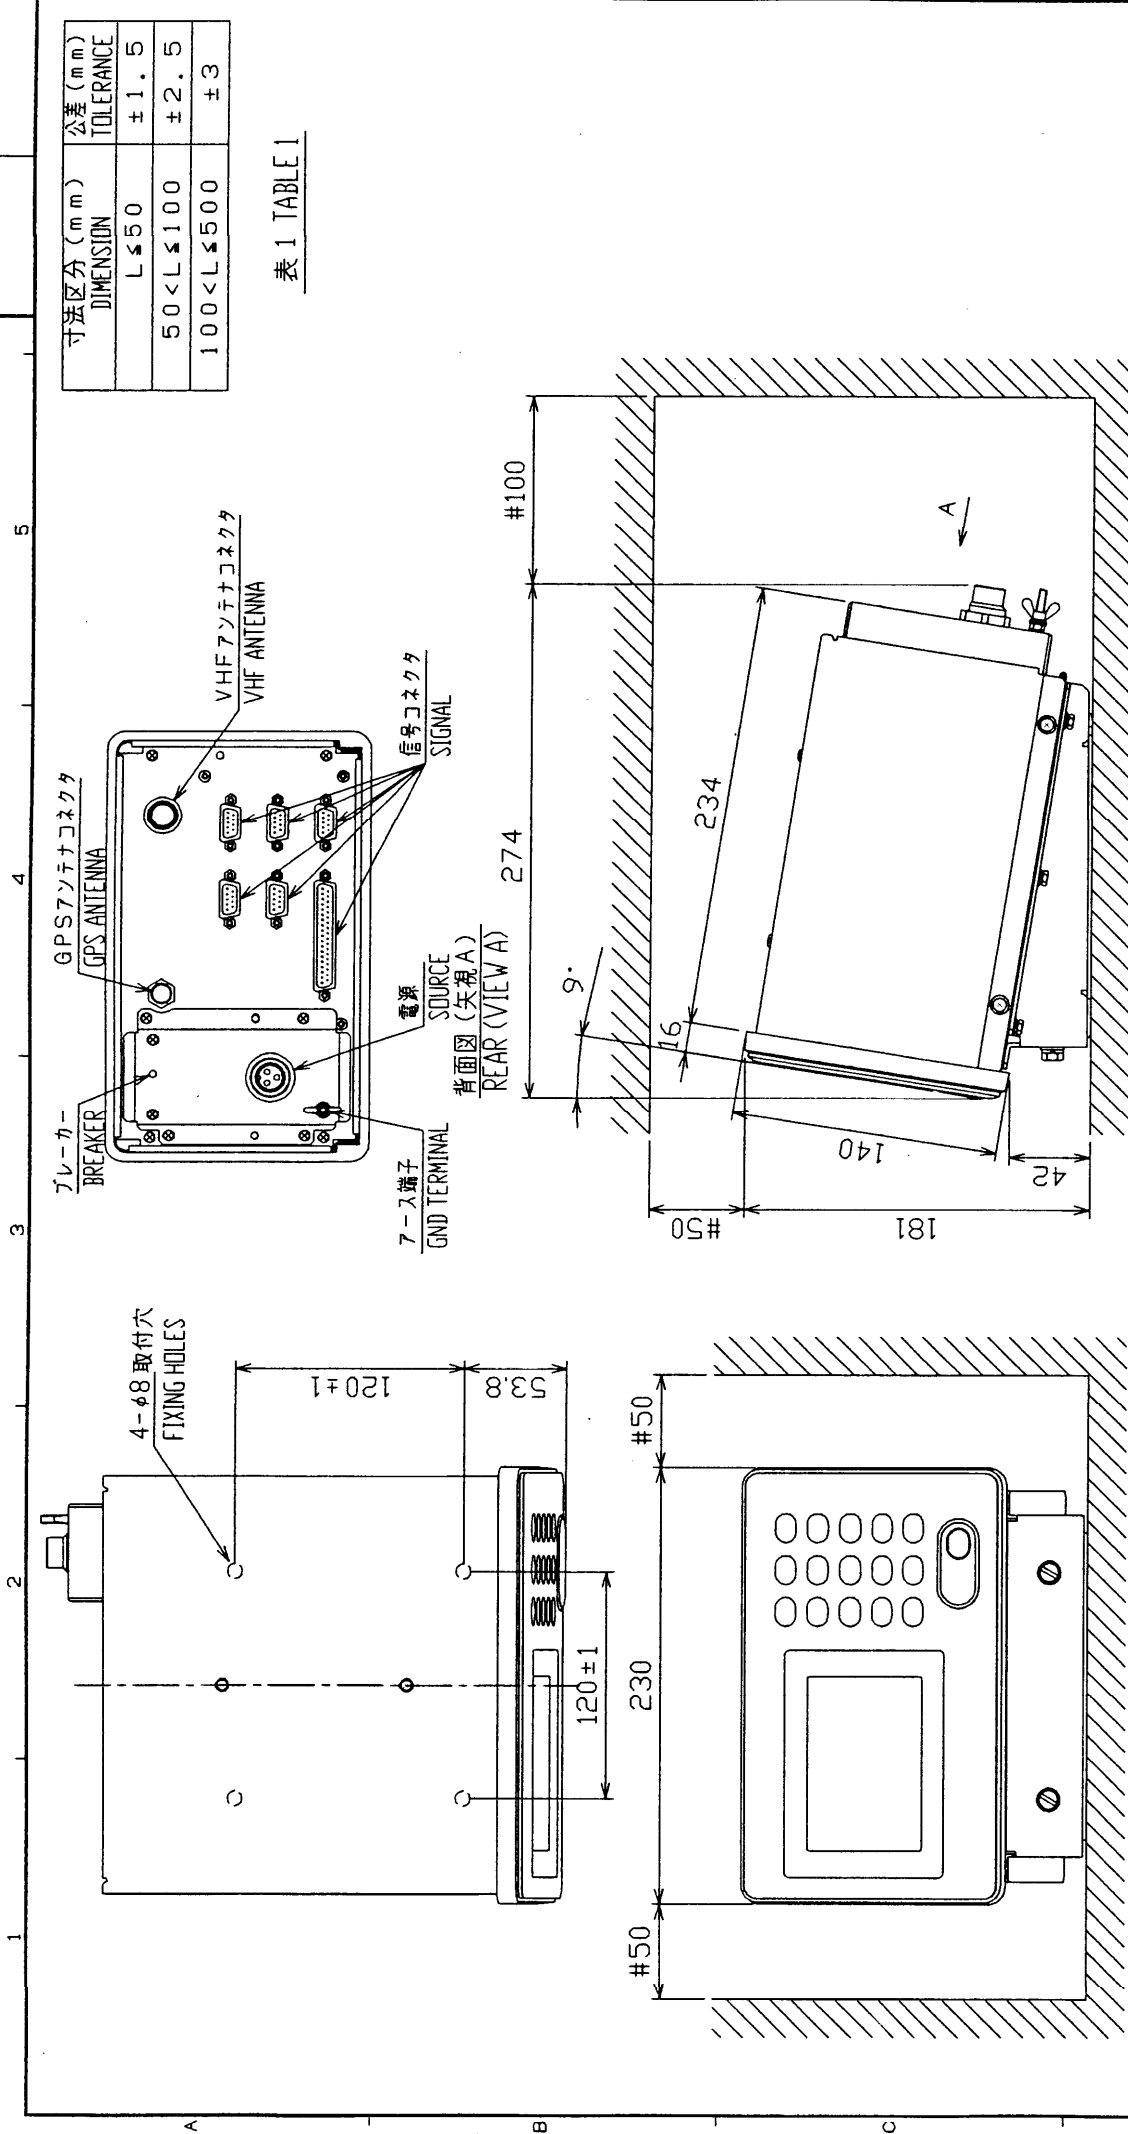

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |


表 1 TABLE 1

| | |
|----------------------------------|--|
| DRAWN July 23, 02 I. YAMASAKI | TITLE FA-100 |
| CHECKED July 23, 02 Y. K. | 名称 トランスポンダ部 (卓上装備) |
| APPROVED July 23, 02 Y. K. | 外寸図 |
| SCALE 1/4 MASS 7.3 kg | NAME TRANSPONDER UNIT (DESKTOP MOUNT) |
| DWG No. C4417-001-C | OUTLINE DRAWING |
| 24-003-200G-4 | |



- 注 記 1) #印寸法は最小サービスマン空間寸法とする。
 2) 指定外の寸法公差は表1による。
 3) 取付用ネジは六角ボルトM6、又はコーナボルト呼び径φを使用。
- NOTE 1. # RECOMMENDED SERVICE CLEARANCE.
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 3. USE M6 BOLTS OR CORNER BOLTS φ6 FOR FIXING THE UNIT.

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ± 1.5 |
| 50 < L ≤ 100 | ± 2.5 |
| 100 < L ≤ 500 | ± 3 |


表 1 TABLE 1

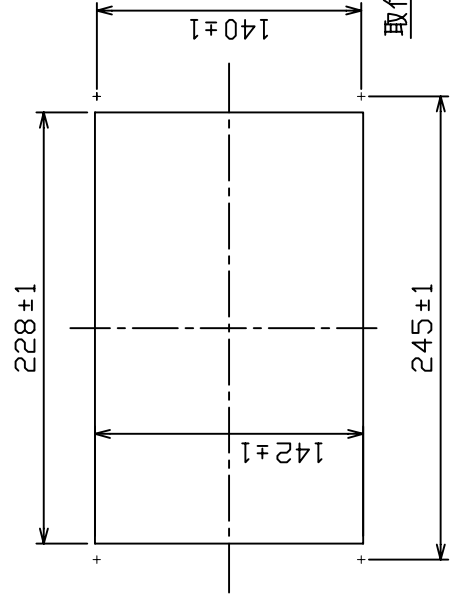

取付穴寸法図 (参考図)
CUTOUT DIMENSIONS

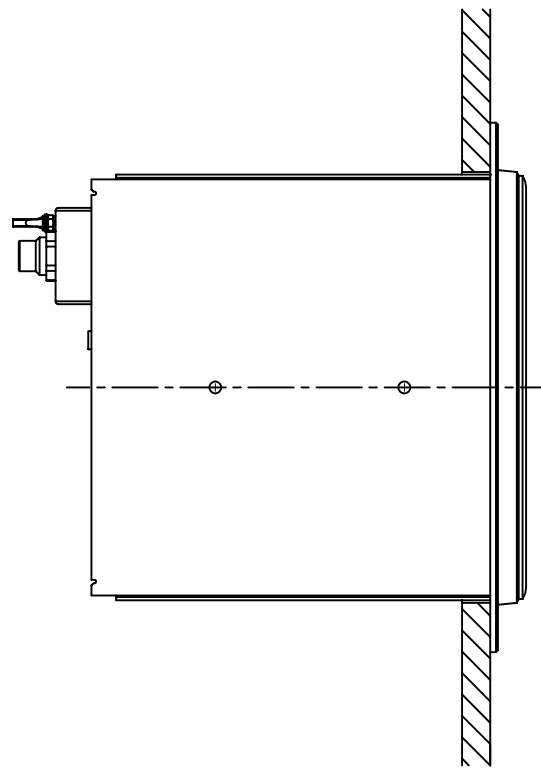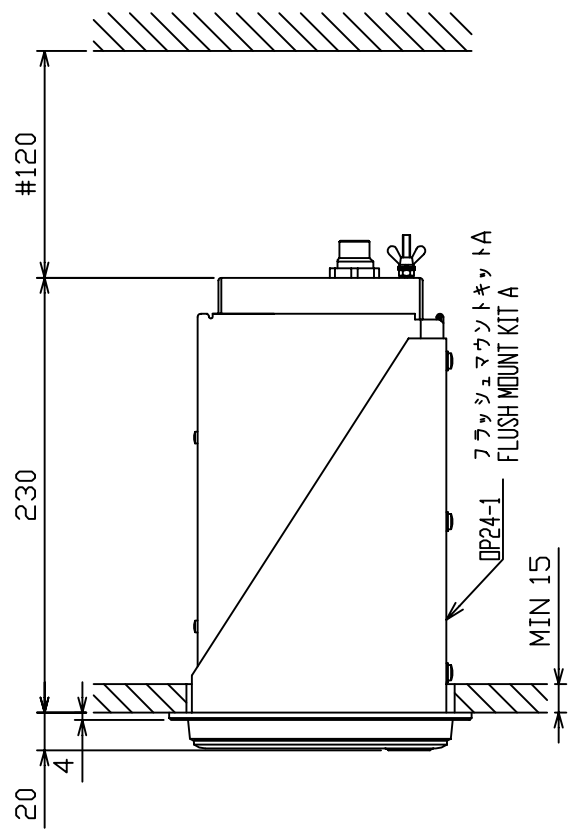


取付穴 4-φ7
FIXING HOLES

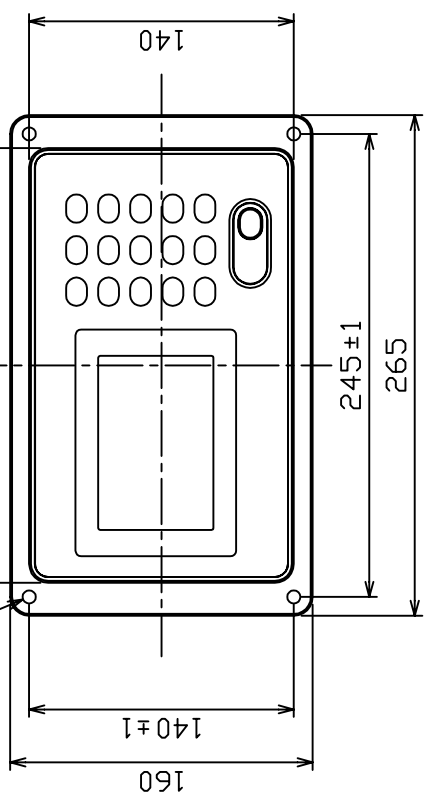

- 注 記 1) # 印寸法は最小サービス空間寸法とする。
 2) 指定外の寸法公差は表 1 による。
 3) 取付用ネジは+トラスタップピンネジ 5 × 2.5 を使用のこと。
- NOTE 1. #: RECOMMENDED SERVICE CLEARANCE.
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 3. USE TAPPING SCREWS 5 × 2.5 FOR FIXING THE UNIT.

| | | | | |
|----------|-------------|-------------|-----------------|----------------------------------|
| DRAWN | Oct. 21 '02 | I. YAMASAKI | TITLE | FA-100 |
| CHECKED | Oct. 21 '02 | Y. KIMURA | 名称 | トランスポンダ部 (埋込装備A) |
| APPROVED | Oct. 21 '02 | Y. KIMURA | 外寸図 | |
| SCALE | 1/4 | MASS 7.3 kg | NAME | TRANSPONDER UNIT (FLUSH MOUNT A) |
| DWG. No. | C4417-605-D | | OUTLINE DRAWING | |

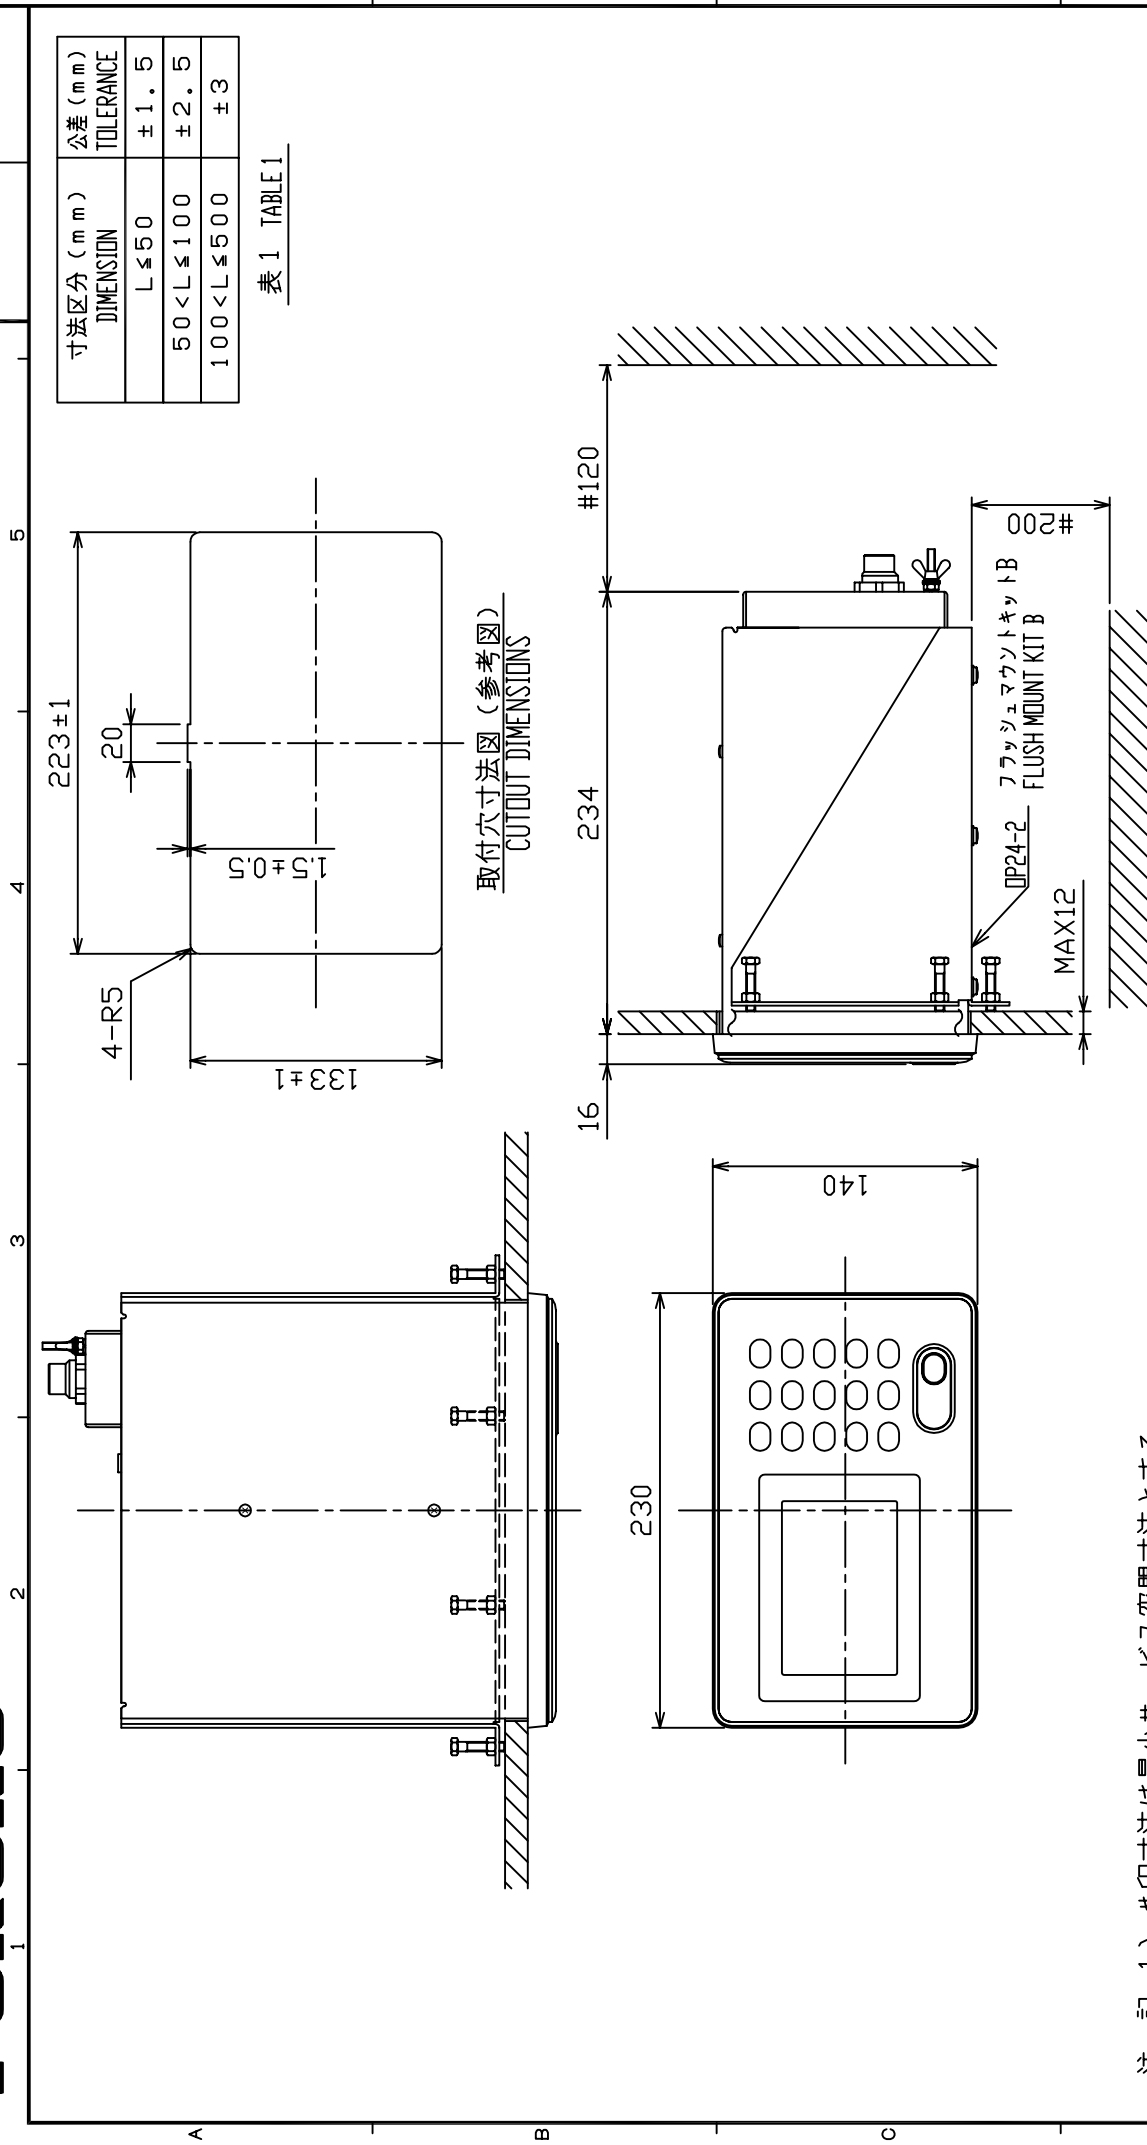

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ± 1.5 |
| 50 < L ≤ 100 | ± 2.5 |
| 100 < L ≤ 500 | ± 3 |

表 1 TABLE 1

取付穴寸法図 (参考図)
CUTOUT DIMENSIONS

注 記 1) #印寸法は最小サービス空間寸法とする。
2) 指定外の寸法公差は表 1 による。

NOTE 1. #: RECOMMENDED SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

| | | | | |
|----------|-------------|-----------------|-----------------|----------------------------------|
| DRAWN | Oct. 21 '02 | I. YAMASAKI | TITLE | FA-100 |
| CHECKED | Oct. 21 '02 | Y. KIMURA | 名称 | トランスポンダ部 (埋込装備B) |
| APPROVED | Oct. 21 '02 | Y. KIMURA | 外寸図 | |
| SCALE | 1/4 | MASS 7.2 ±0.2 g | NAME | TRANSPONDER UNIT (FLUSH MOUNT B) |
| DWG No. | C4417-006-D | 24-003-282G-2 | OUTLINE DRAWING | |

A
B
C
D

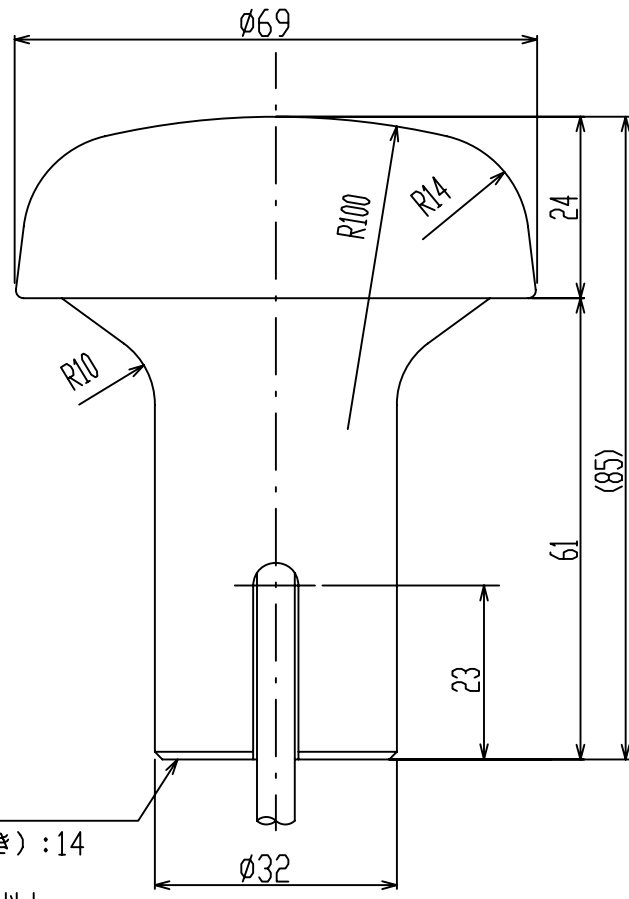


表1 TABLE 1

| 寸法区分(mm) DIMENSION | 公差(mm) TOLERANCE |
|-----------------------|---------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |

1-14UNS1B
 ねじ山数 (25.4mmにつき) : 14
 ピッチ : 1.8143 mm
 オネジ有効長さ : 19 mm以上
 オネジ有効径 : 24.17mm
 THREAD PER 25.4mm (1 INCH): 14
 PITCH: 1.8143 mm
 THREAD LENGTH: 19 mm OR MORE
 PITCH DIAMETER: 24.17mm

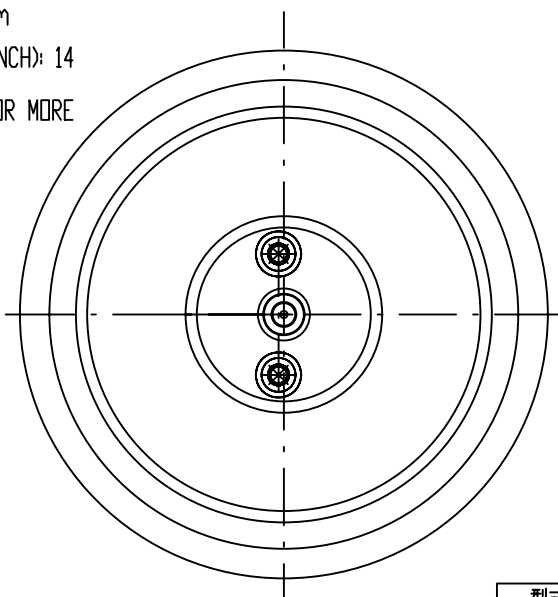


表2 TABLE 2

| 型式 TYPE | ケーブル長(m) CABLE LENGTH | プラグ PLUG | 質量(kg±10%) MASS |
|------------|--------------------------|-------------|--------------------|
| GPA-017 | 10 | TNC-P-3 | 0.6 |
| GPA-017S | 0.2 | TNC-J-3 | 0.15 |

注記
 指定外の寸法公差は表1による。


NOTE
 TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

| | |
|---------------------------------|-----------------------|
| DRAWN Mar. 27 '07 T.YAMASAKI | TITLE GPA-017/017S |
| CHECKED Mar. 27 '07 T.TAKENO | 名称 空中線部 |
| APPROVED Mar. 27 '07 R.Esumi | 外寸図 |
| SCALE 1/1 MASS TABLE 2 表2参照 | NAME ANTENNA UNIT |
| DWG.No. C4384-G04-L | OUTLINE DRAWING |

1 2 3 4

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$ | ± 1.5 |
| $50 < L \leq 100$ | ± 2.5 |
| $100 < L \leq 500$ | ± 3 |

表 1 TABLE 1

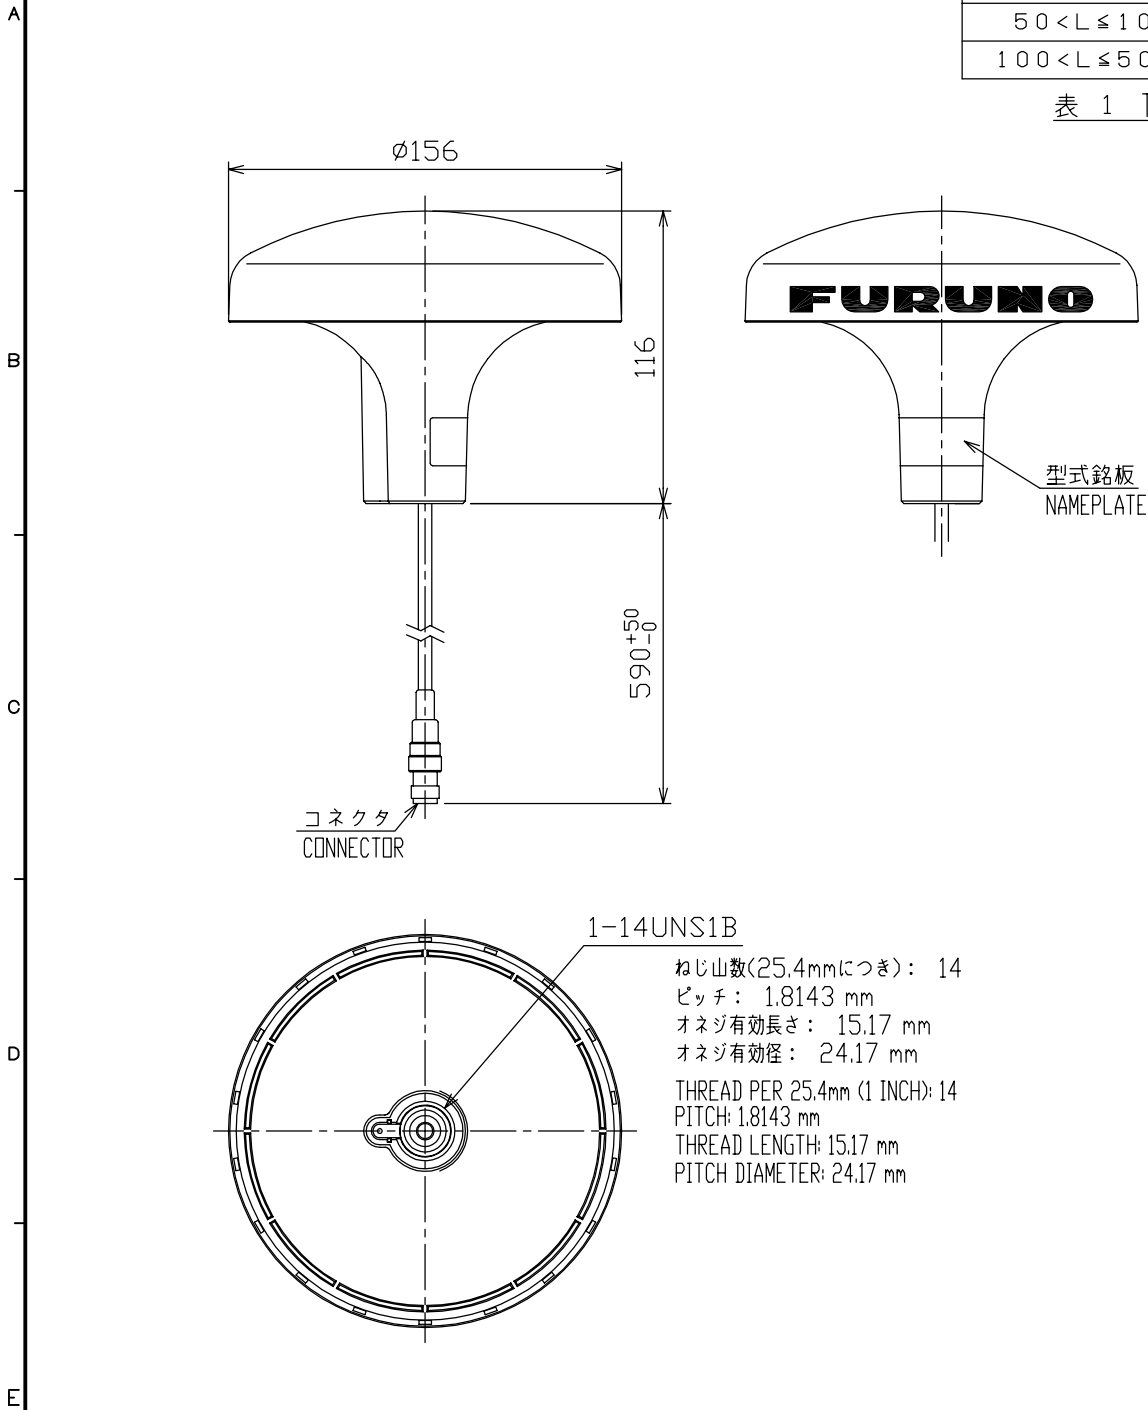


注 記 1) 指定外の寸法公差は表 1 による。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.

| | | |
|---|-------------------------------|----------------------------------|
| DRAWN May 12 '03 T. YAMASAKI | | TITLE GSC-001-FA |
| CHECKED May 12 '03 T. Matsuguchi | | 名称 GPS アンテナ部 |
| APPROVED May 20 '03 T. Matsuguchi | FA-100 | 外寸図 |
| SCALE 1/3 | MASS $\pm 10\%$ 0.47 kg | NAME GPS ANTENNA UNIT |
| DWG.No. C4417-G07-B | 質量はケーブルを含む。 MASS W/ CABLE. | 24-003-330G-0 OUTLINE DRAWING |

表 1 TABLE 1

| 寸法区分 (mm) DIMENSIONS | 公差 (mm) TOLERANCE |
|-------------------------|----------------------|
| $L \leq 50$ | ± 1.5 |
| $50 < L \leq 100$ | ± 2.5 |
| $100 < L \leq 500$ | ± 3 |
| $500 < L \leq 1000$ | ± 4 |
| $1000 < L \leq 2000$ | ± 5 |

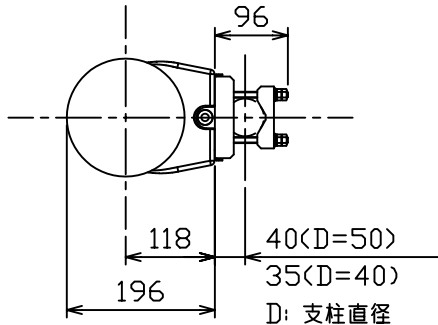

D: 支柱直径
D: DIAMETER OF STANCHION

FAB-151D

GPA-020S

$\phi 155$

1245 \pm 15

236 \pm 5

169

この点より上に金属物体が
突出しないようにすること。
NO METAL OBJECTS SHOULD
BE BEYOND THIS POINT.

アンテナ支柱 ($\phi 40 \sim \phi 50$)
STANCHION

60

4-M8

注 記 1) 指定外の寸法公差は表 1 による。

NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.

| | | |
|---------------------------------|------------------------------|----------------------------------|
| DRAWN 14/Dec/2015 T.YAMASAKI | | TITLE GVA-100 |
| CHECKED 14/Dec/2015 H.MAKI | | 名称 GPS/VHF 複合空中線部 |
| APPROVED 15/Dec/2015 H.MAKI | FA-100/50/150/170 | 外寸図 |
| SCALE 1/10 | MASS 3.3 $\pm 10\%$ kg | NAME GPS/VHF COMBINED ANTENNA |
| DWG.No. C4417-G02-G | 24-003-301G-2 | OUTLINE DRAWING |

ケーブル導入口 CABLE ENTRY

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$ | ± 1.5 |
| $50 < L \leq 100$ | ± 2.5 |
| $100 < L \leq 500$ | ± 3 |



表 1 TABLE 1

4-φ6 取付穴
FIXING HOLES

型式銘板
NAMEPLATE

ケーブル長 $L = 3280^{+150}$

CABLE LENGTH

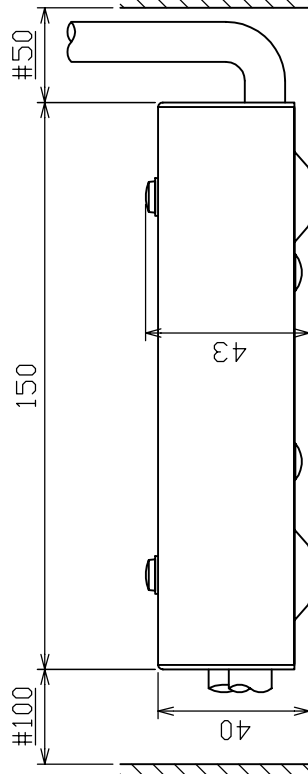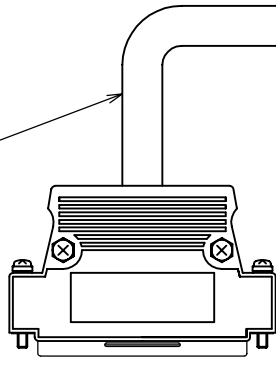

#10

ケーブル導入口 CABLE ENTRY

240 ± 0.5

290


- 注記 1) #印寸法は最小サービス空間寸法とする。
 2) 指定外の寸法公差は表1による。
 3) 取付用ネジは+トラスタ呼び径5×20を使用のこと。
- NOTE 1. # RECOMMENDED SERVICE CLEARANCE.
 TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 2. USE TAPPING SCREWS 5x20 FOR FIXING THE UNIT.

| | | | | |
|----------|-------------|---------------------------|-------|---------------|
| DRAWN | Jan. 9 '03 | T. YAMASAKI | TITLE | CB-100 |
| CHECKED | Jan. 9 '03 | Y. KIMURA | 名称 | 接続箱 |
| APPROVED | Jan. 9 '03 | Y. KIMURA | 外寸図 | FA-100 |
| SCALE | 1/2 | MASS $\pm 10\%$ 2.0 kg | NAME | JUNCTION BOX |
| DWG No. | C4417-G03-B | | | 24-003-400G-5 |

OUTLINE DRAWING

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ± 1.5 |
| 50 < L ≤ 100 | ± 2.5 |
| 100 < L ≤ 500 | ± 3 |

表 1 TABLE 1



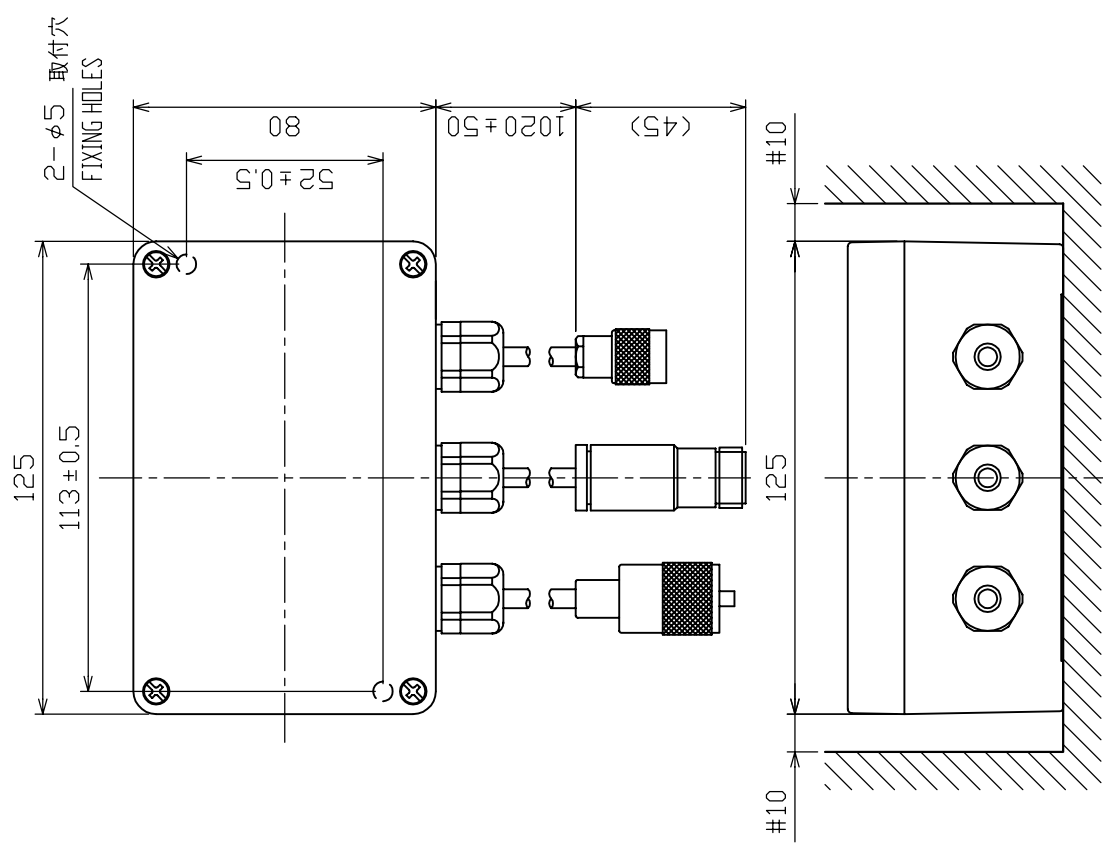


- 注 記
- 1) # 印寸法は最小サービスイ空間寸法とする。
 - 2) 指定外の寸法公差は表 1 による。
 - 3) 取付用ネジは + ナベタップピンネジ 4 x 3.0 を使用のこと。
- NOTE
1. # RECOMMENDED SERVICE CLEARANCE.
 2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
 3. USE TAPPING SCREWS 4x3.0 FOR FIXING THE UNIT.

| | | | | |
|----------|-------------|------------------|-------|-----------------|
| DRAWN | Jan. 9 '03 | T. YAMASAKI | TITLE | DB-1 |
| CHECKED | Jan. 9 '03 | Y. KIMURA | 名称 | 分配器 |
| APPROVED | Jan. 9 '03 | <i>y. Kimura</i> | 外寸図 | FA-100 |
| SCALE | 1/2 | MASS 0.85 kg | NAME | DISTRIBUTOR |
| DWG No. | C4417-G04-C | | | 24-003-320G-4 |
| | | | | OUTLINE DRAWING |


表 1 TABLE 1

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| L ≤ 50 | ±1.5 |
| 50 < L ≤ 100 | ±2.5 |
| 100 < L ≤ 500 | ±3 |

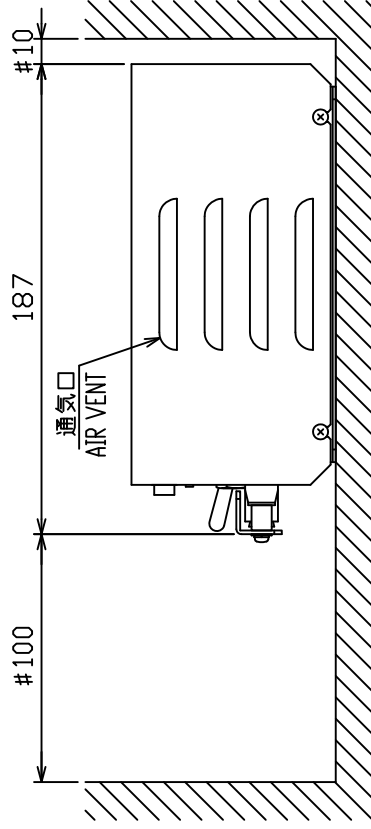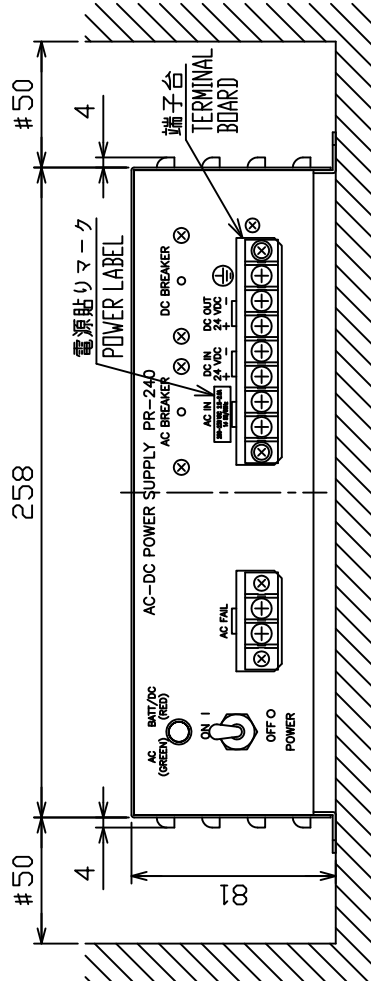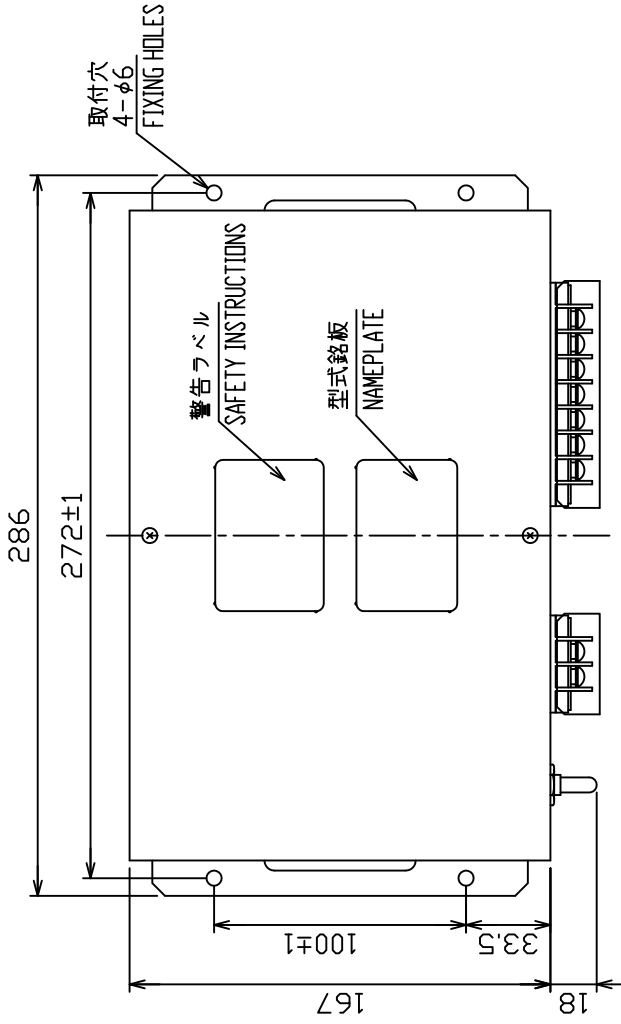


- 注 記 1) 指定なき寸法公差は表 1 による。
 2) #印寸法は最小サービスタップピンネジ 呼び径 4 × 1.6 を使用のこと。
 3) 取付用ネジは +トラスターピピンネジ 呼び径 4 × 1.6 を使用のこと。
- NOTE 1. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS WHICH IS NOT SPECIFIED.
 2. # MINIMUM SERVICE CLEARANCE.
 3. USE TAPPING SCREWS Ø4x1.6 FOR FIXING THE UNIT.

| | | | |
|----------|----------------------|----------|-------------------------|
| DRAWN | 25/Sep/09 T.YAMASAKI | TITLE | PR-240 |
| CHECKED | 25/Sep/09 T.TAKENO | 名# | AC/DC電源ユニット |
| APPROVED | 26/Oct/09 R. Esumi | 外寸図 | |
| SCALE | 1/3 | NAME | AC/DC POWER SUPPLY UNIT |
| DWG No. | C5003-603-J | REF. No. | 24-003-500G-4 |
| | | | OUTLINE DRAWING |

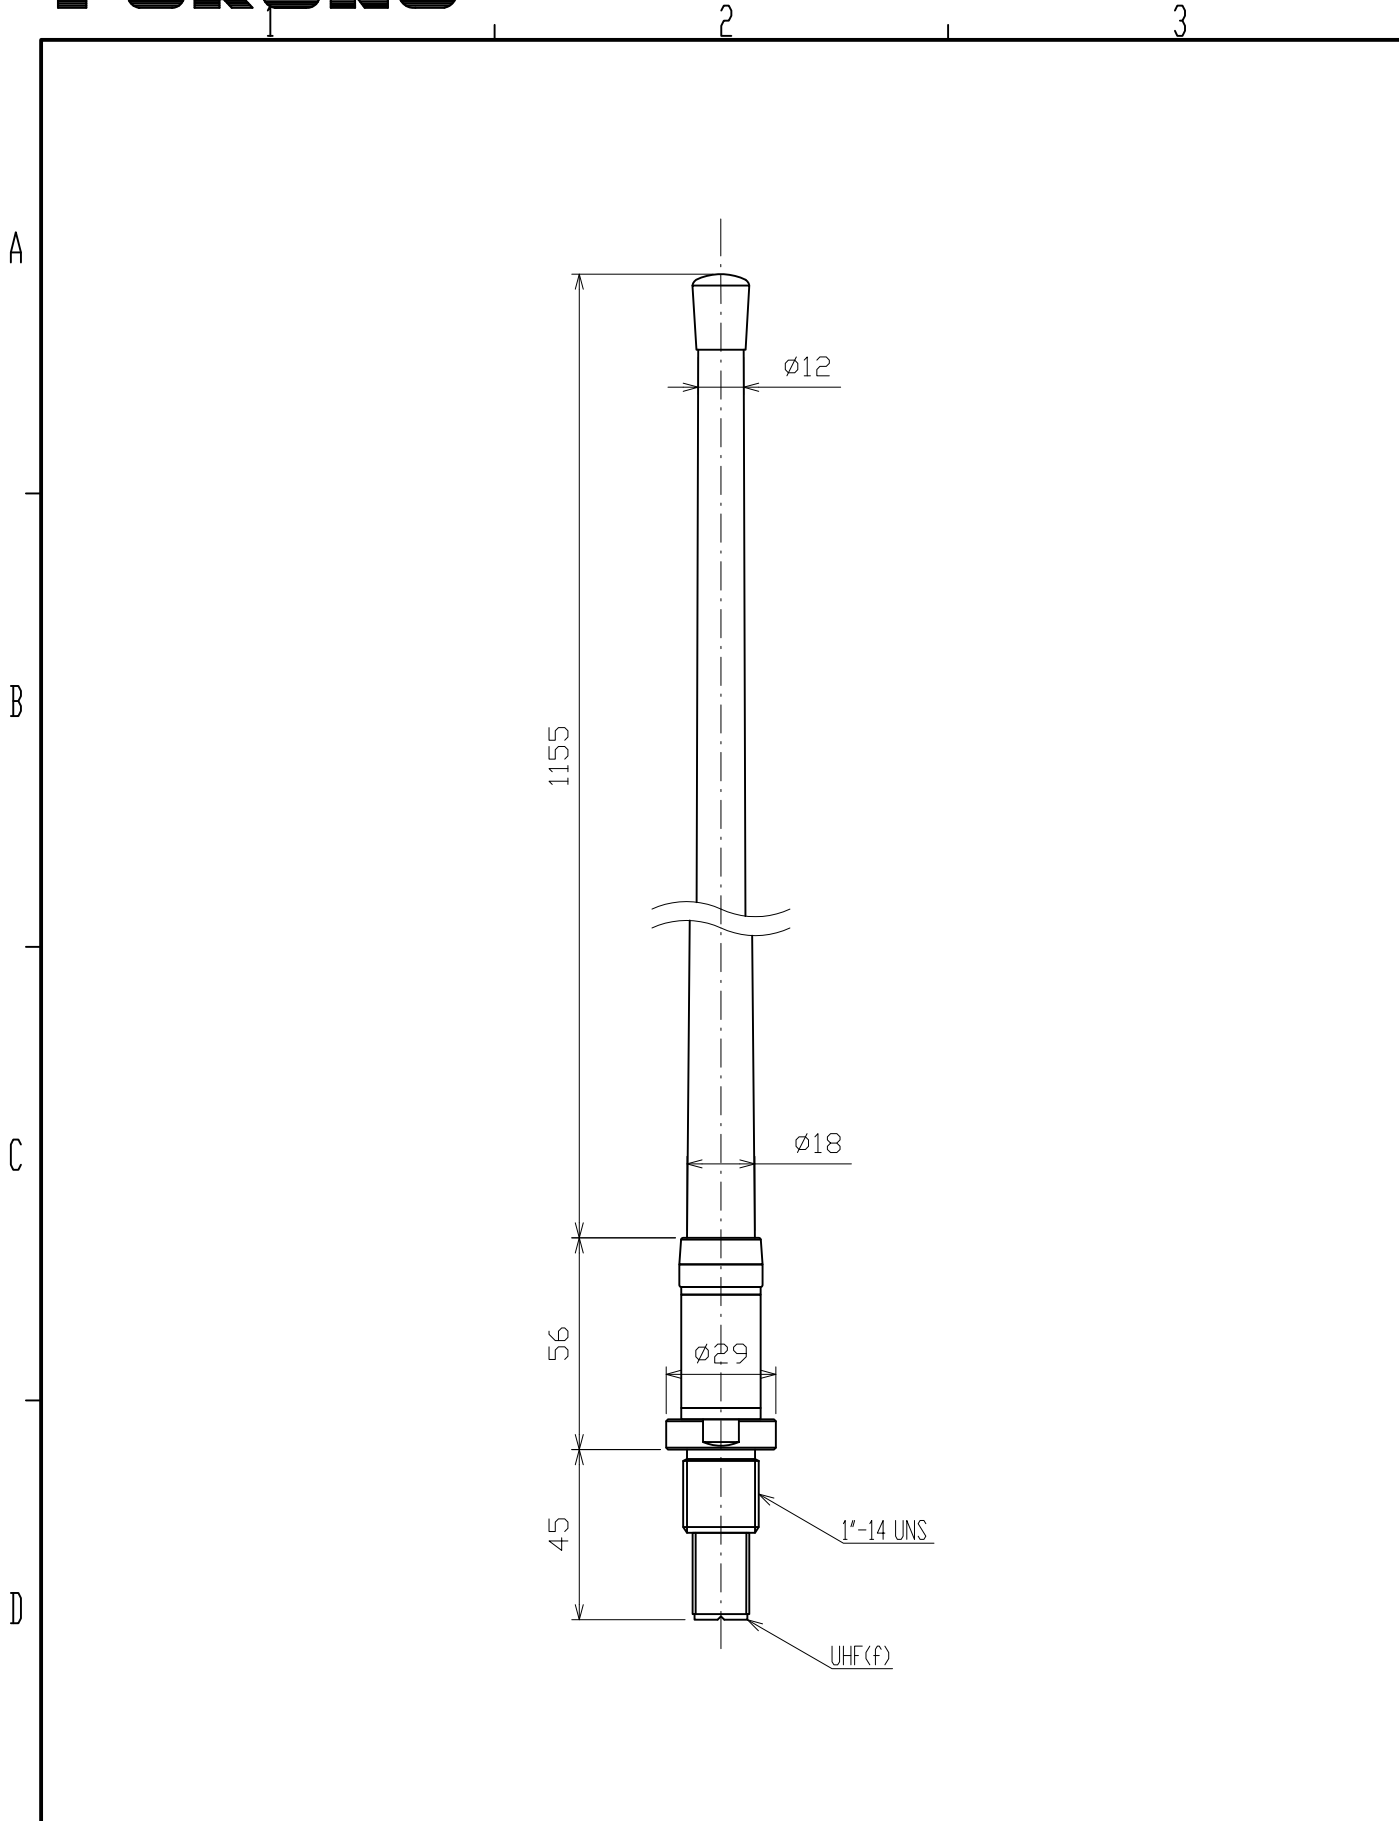

| | | | |
|------------------------------|------------------|--------------------------|--|
| DRAWN 15/Nov/2016 T.YAMASAKI | | TITLE CX4-3/FEC | |
| CHECKED 15/Nov/2016 H.MAKI | | 名称 アンテナ | |
| APPROVED 15/Nov/2016 H.MAKI | | 外寸図 | |
| SCALE 1/2 | MASS 0.6 ±10% kg | NAME ANTENNA | |
| DWG. No. C5013-G04-A | | REF. No. OUTLINE DRAWING | |

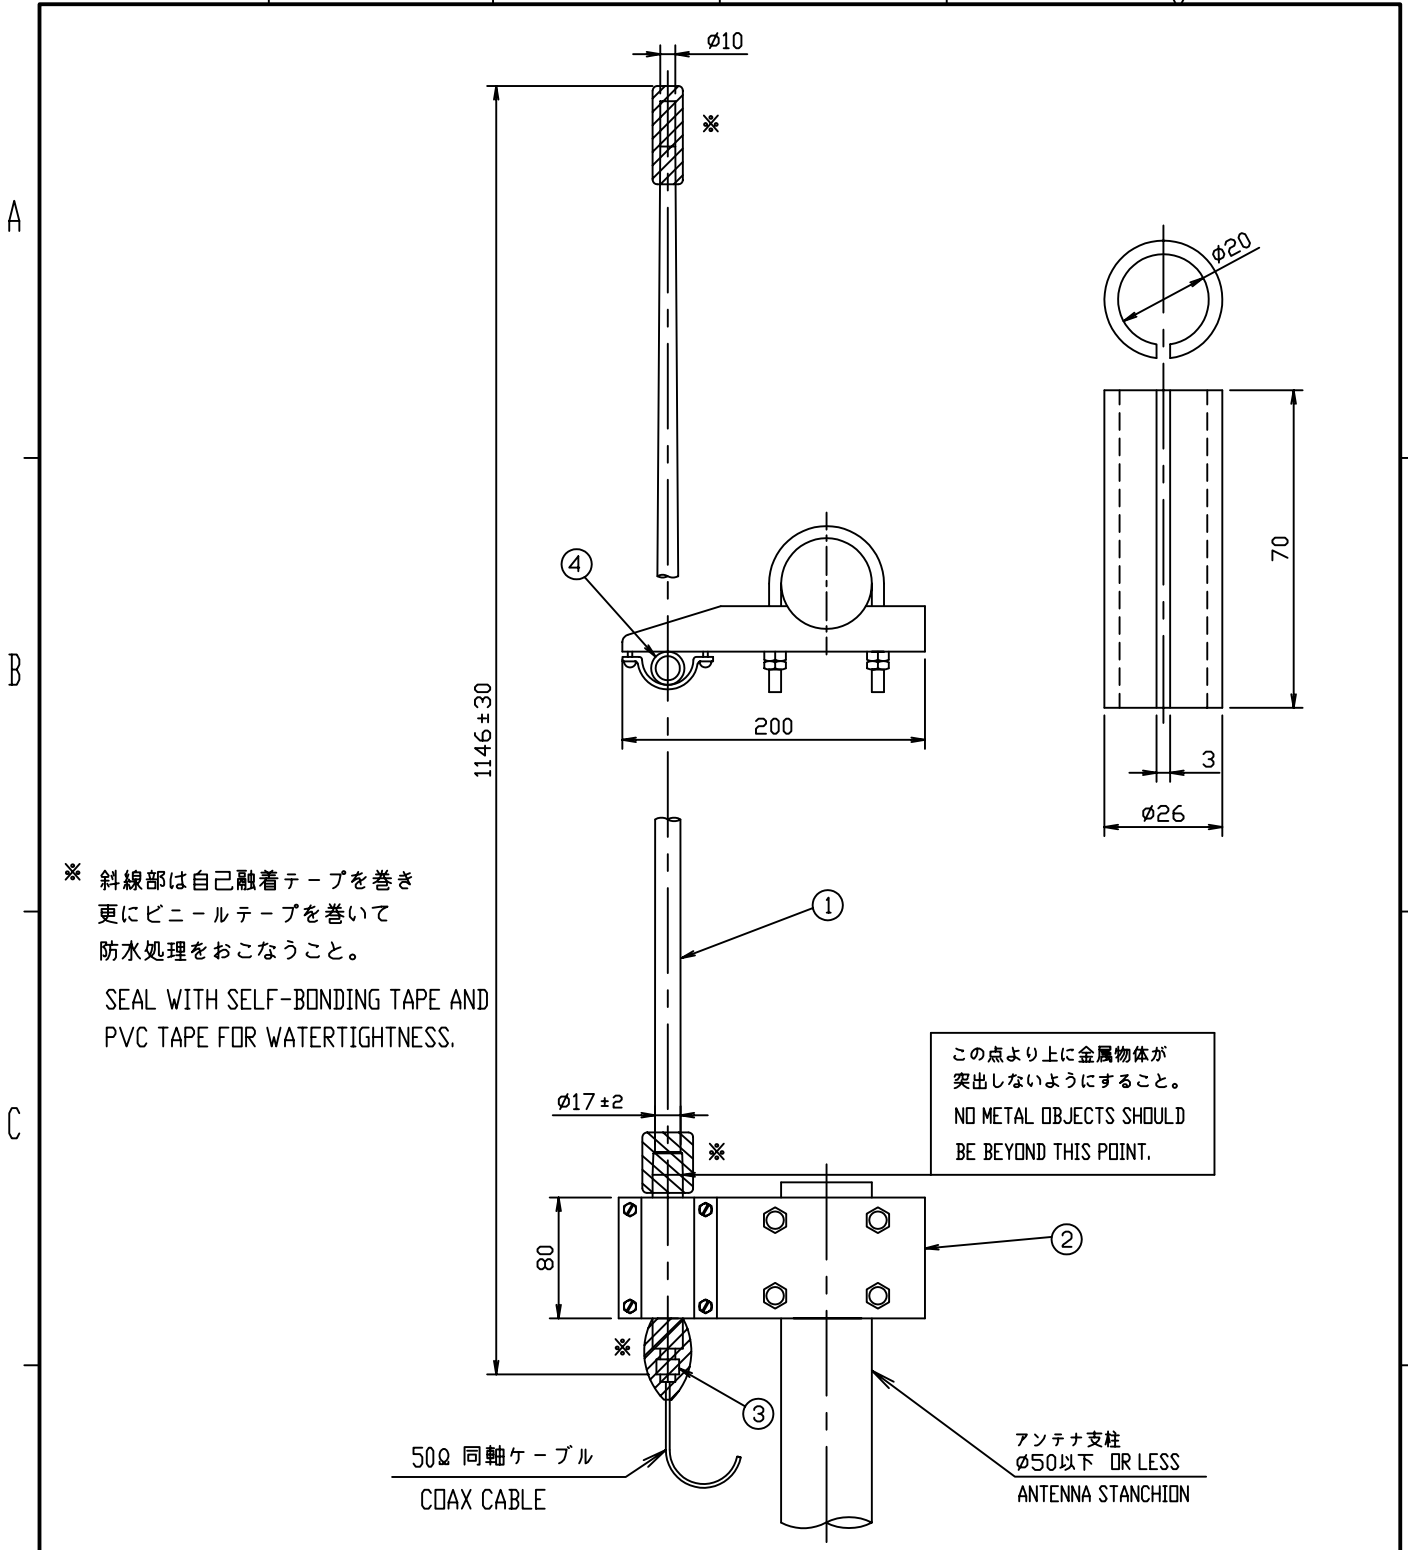

※ 斜線部は自己融着テープを巻き更にビニールテープを巻いて防水処理をおこなうこと。

SEAL WITH SELF-BONDING TAPE AND PVC TAPE FOR WATERTIGHTNESS.


この点より上に金属物体が突出しないようにすること。
NO METAL OBJECTS SHOULD BE BEYOND THIS POINT.

50Ω 同軸ケーブル
COAX CABLE

アンテナ支柱
ø50以下 OR LESS
ANTENNA STANCHION

| | | | | | |
|------------|-----------------------------|------------------------|------------|---------------|---------------|
| 4 | 固定用パイプ LINER PIPE | 硬質塩ビ VINYL CHLORIDE | 1 | | |
| 3 | 同軸コネクタ COAX. CONNECTOR | | 1 | | M-R |
| 2 | アンテナ取付金具 ANTENNA BRACKET | SUS | 1 式 SET | 4-310071 | 0.6kg |
| 1 | アンテナ棒 ANTENNA ELEMENT | FRP | 1 | | 0.25kg |
| 品番 ITEM | 品名 NAME | 材質 MATERIAL | 数量 Q'TY | 図番 DWG.No. | 摘要 REMARKS |

| | | | | |
|----------|--------------|----------------------|-------|---------------------|
| DRAWN | Feb. 1 '05 | T.YAMASAKI | TITLE | FAB-151D |
| CHECKED | Feb. 1 '05 | T.MATSUGUCHI | 名称 | 150MHz ホイップアンテナ |
| APPROVED | Feb. 02 '05 | T. Matsuguchi | | 外寸図 |
| SCALE | 1/5 | MASS 0.85 ±10% kg | NAME | 150MHz WHIP ANTENNA |
| DWG.No. | C5013-019- J | 4-110718 | | OUTLINE DRAWING |

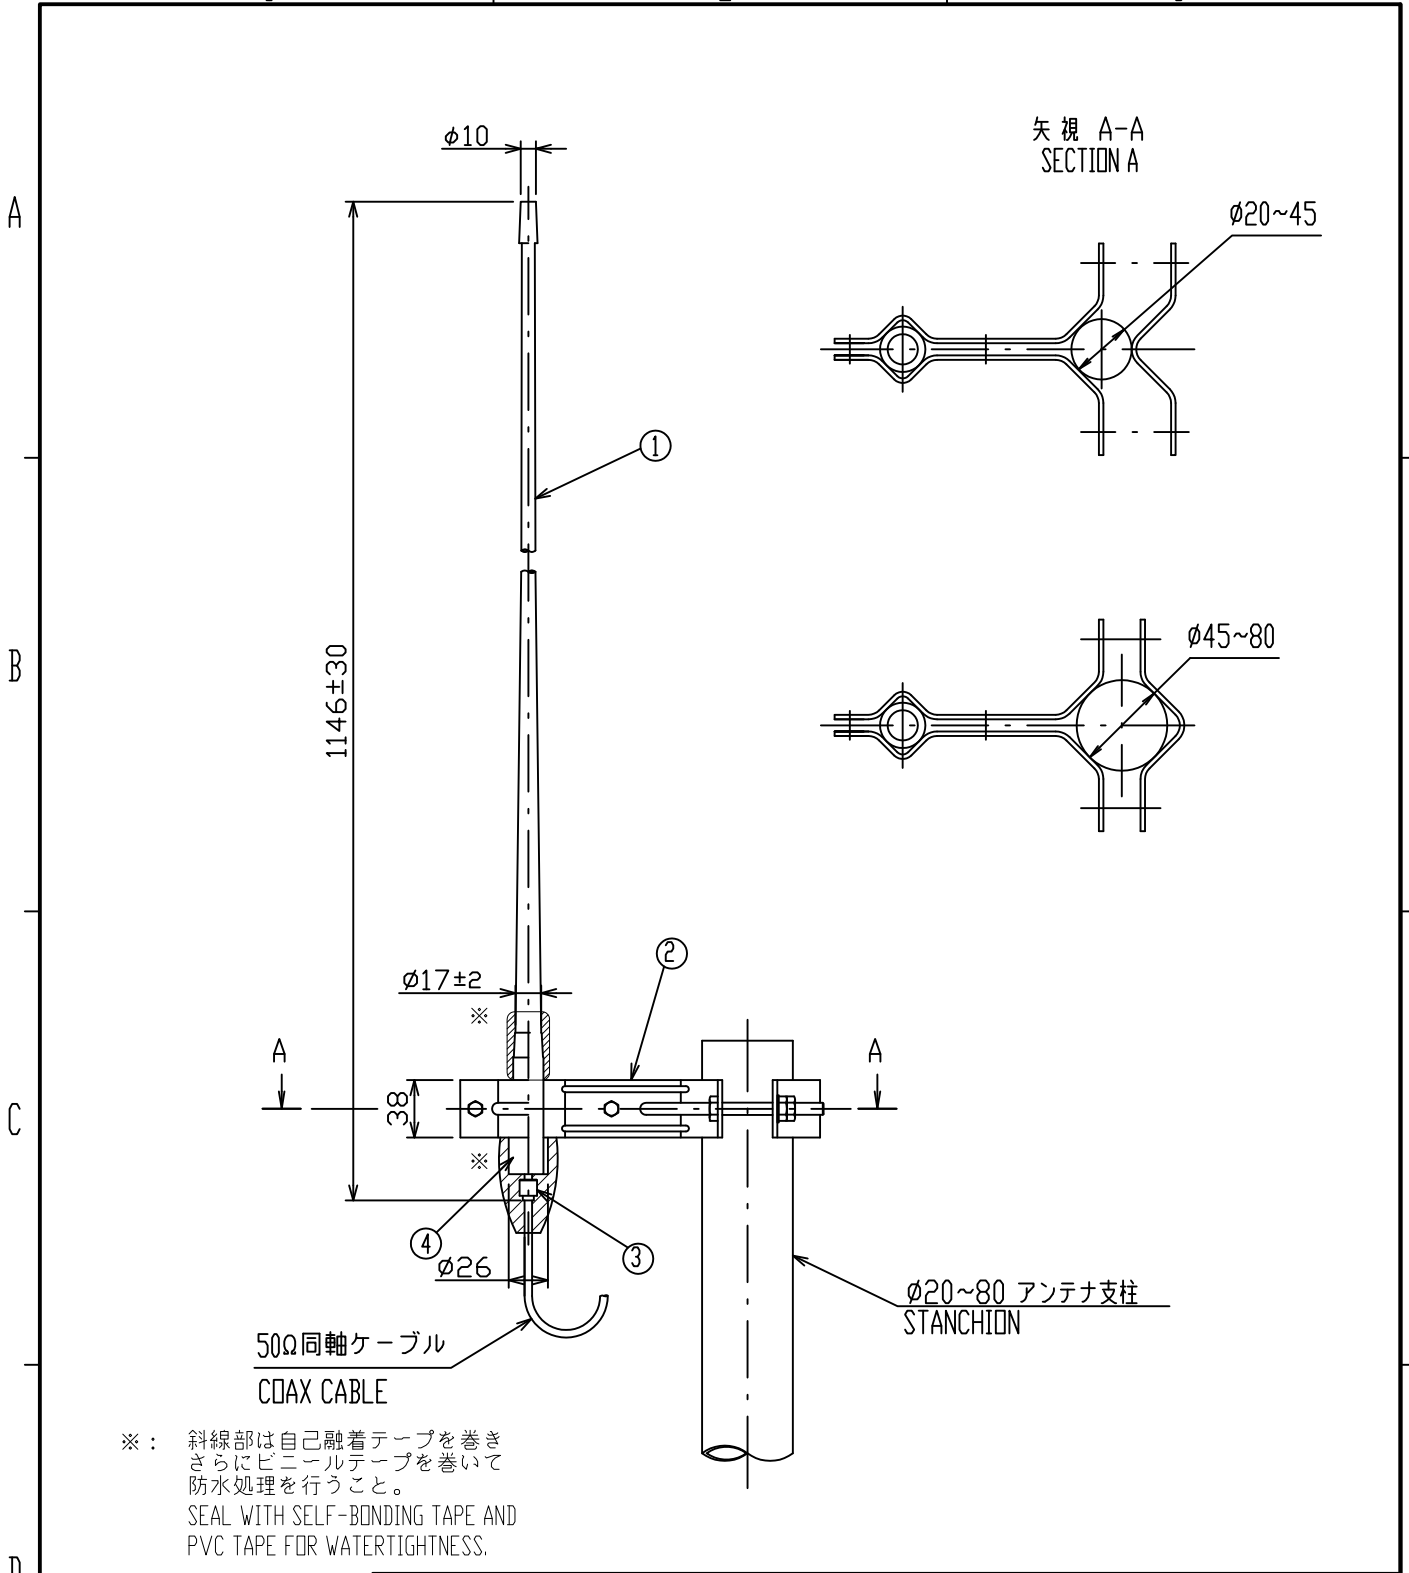


※： 斜線部は自己融着テープを巻き
 さらにはビニールテープを巻いて
 防水処理を行うこと。
 SEAL WITH SELF-BONDING TAPE AND
 PVC TAPE FOR WATERTIGHTNESS.

| | | | | | |
|------------|-----------------------------|------------------------|------------|-----------------|----------------|
| 4 | 固定用パイプ LINEAR PIPE | 硬質塩ビ VINYL CHLORIDE | 1 | | |
| 3 | 同軸コネクタ COAX. CONNECTOR | | 1 | | M-R |
| 2 | アンテナ取付金具 ANTENNA BRACKET | SUS316L | 1 式 SET | M-15AS | t2.5 |
| 1 | アンテナ棒 ANTENNA ELEMENT | FRP | 1 | FAB-151D | 0.25 kg |
| 品番 ITEM | 品 名 NAME | 材 質 MATERIAL | 数 量 QTY | 図 番 DWG. No. | 備 考 REMARKS |


| | | | | |
|----------|-------------|---------------------|---------------------------------------|--|
| DRAWN | 27/Aug/2015 | T.YAMASAKI | TITLE | FAB-151D + M-15AS1 |
| CHECKED | 27/Aug/2015 | H.MAKI | 名称 | 150MHzホイップアンテナ(取付金具) |
| APPROVED | 27/Aug/2015 | H.MAKI | 外寸図 | |
| SCALE | 1/5 | MASS ±10% 0.7 kg | 質量は取付金具を含む。 MASS INCLUDES BRACKET. | NAME 150MHz WHIP ANTENNA w/ BRACKET |
| DWG. No. | C5011-042-E | | REF. No. | OUTLINE DRAWING |

取付位置
MOUNTING LOCATION

他の機器のアンテナから下の図の距離以上離す。
THIS FIGURE SHOWS THE SEPARATION DISTANCES FROM OTHER ANTENNAS TO AVOID MUTUAL INTERFERENCE.

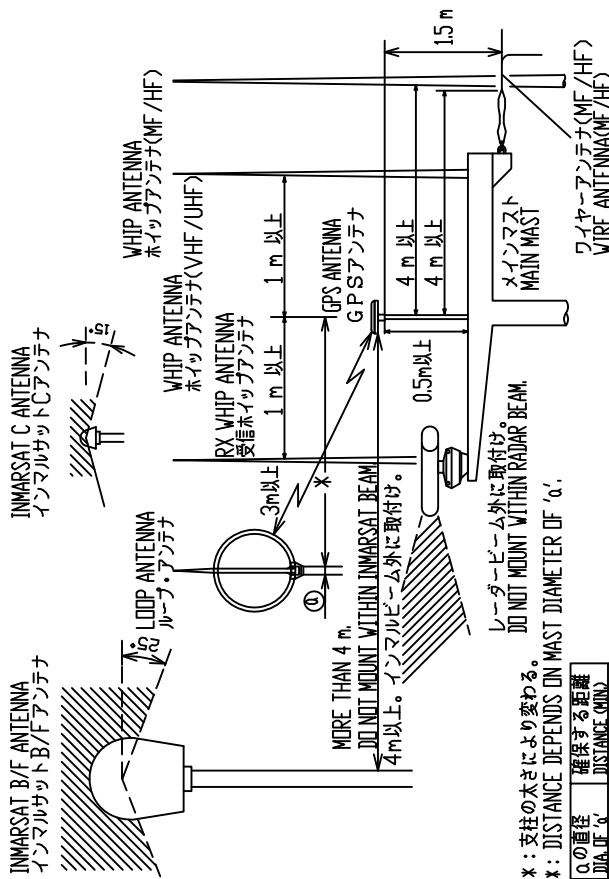

B) スタンションやパルピットにつけるとき
レール用アンテナベース No.13-RC5160
(取付可能レール直径:φ19~φ32)
(コード番号:000-806-114)

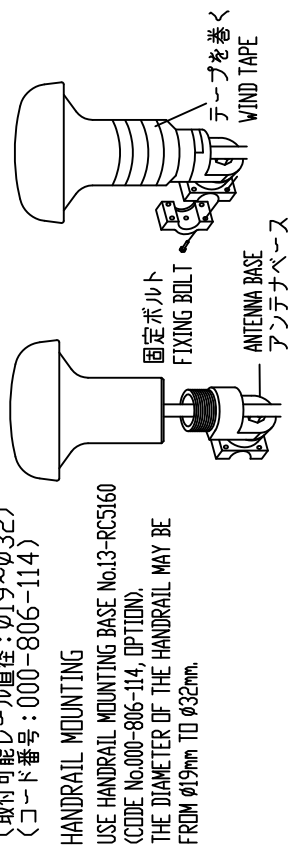


注記 1) パイプやアンテナベースはアンテナユニットにねじ込んだ後に固定する。
2) アンテナを固定するときはパイプ(アンテナベース)をアンテナにねじ込むこと。
アンテナ脚をねじるとコネクタ部やケーブルに無理がかかり、故障の原因となる。


NOTE 1. FASTEN PIPE(ANTENNA BASE) TO ANTENNA UNIT FIRST THEN FIX THEM TO MAST OR HANDRAIL.
2. WHEN FIXING ANTENNA, TURN PIPE OR ANTENNA BASE; NOT THE ANTENNA.
TURNING THE ANTENNA MAY TWIST THE CABLE AND PLACE STRESS ON CONNECTOR.

A) マストへの取付け
MAST MOUNTING

α) マスト取付金具CP20-0111(工事材料)でマストに固定する。
USE MAST MOUNTING KIT CP20-0111.

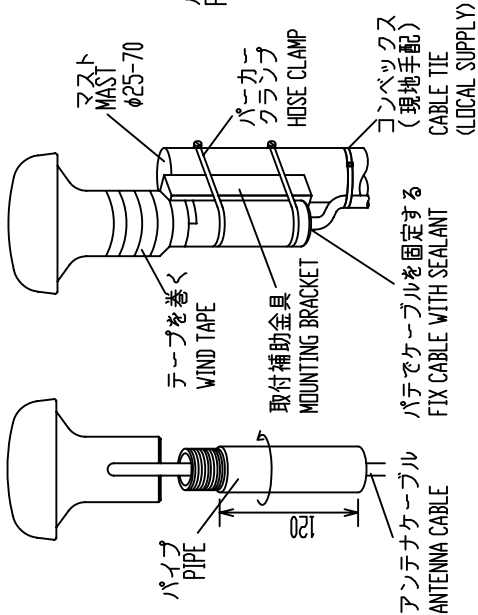

β) パイプのみを使うとき
USE A PIPE ONLY.

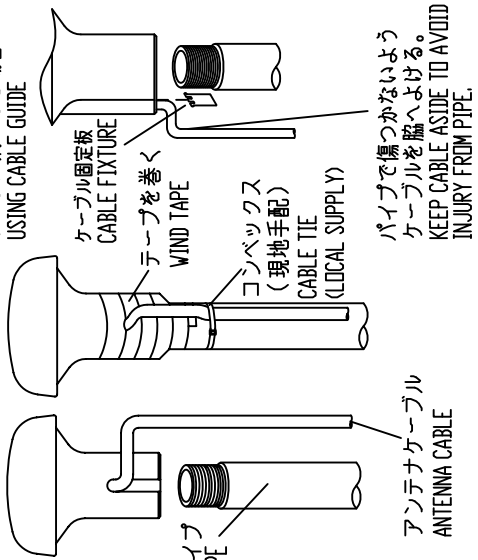


C) 取付ける場所が傾斜しているとき ANTENNA BASE MOUNTING


オプションのアンテナベースを使う。
USE OPTIONAL ANTENNA BASE.

| 傾斜 INCLINATION | 5° - 33° | 32° - 65° | 65° - 98° |
|--|---|--|-----------|
| 取付方法 MOUNTING METHOD | | | |
| アンテナ ベース型式 ANT. BASE TYPE コード番号 CODE No. | 直型アンテナベース RIGHT ANGLE ANTENNA BASE No.13-QA330 000-803-239 | L型アンテナベース L-TYPE ANTENNA BASE No.13-QA310 000-803-240 | |

アンテナベース基部
MOUNTING DIMENSIONS OF ANTENNA BASE.

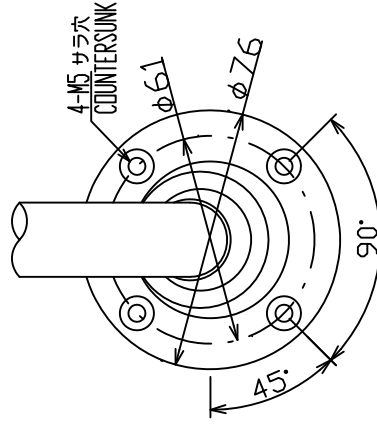

DRAWN 14/MAY/2014 I. YAMASAKI TITLE GPA series
CHECKED 14/MAY/2014 H. MAKI 名称 空中線部
APPROVED 15/May/2014 H. MAKI 装備要領図
SCALE MASS NAME ANTENNA UNIT
Drawing No. C4384-Y01-F INSTALLATION PROCEDURE

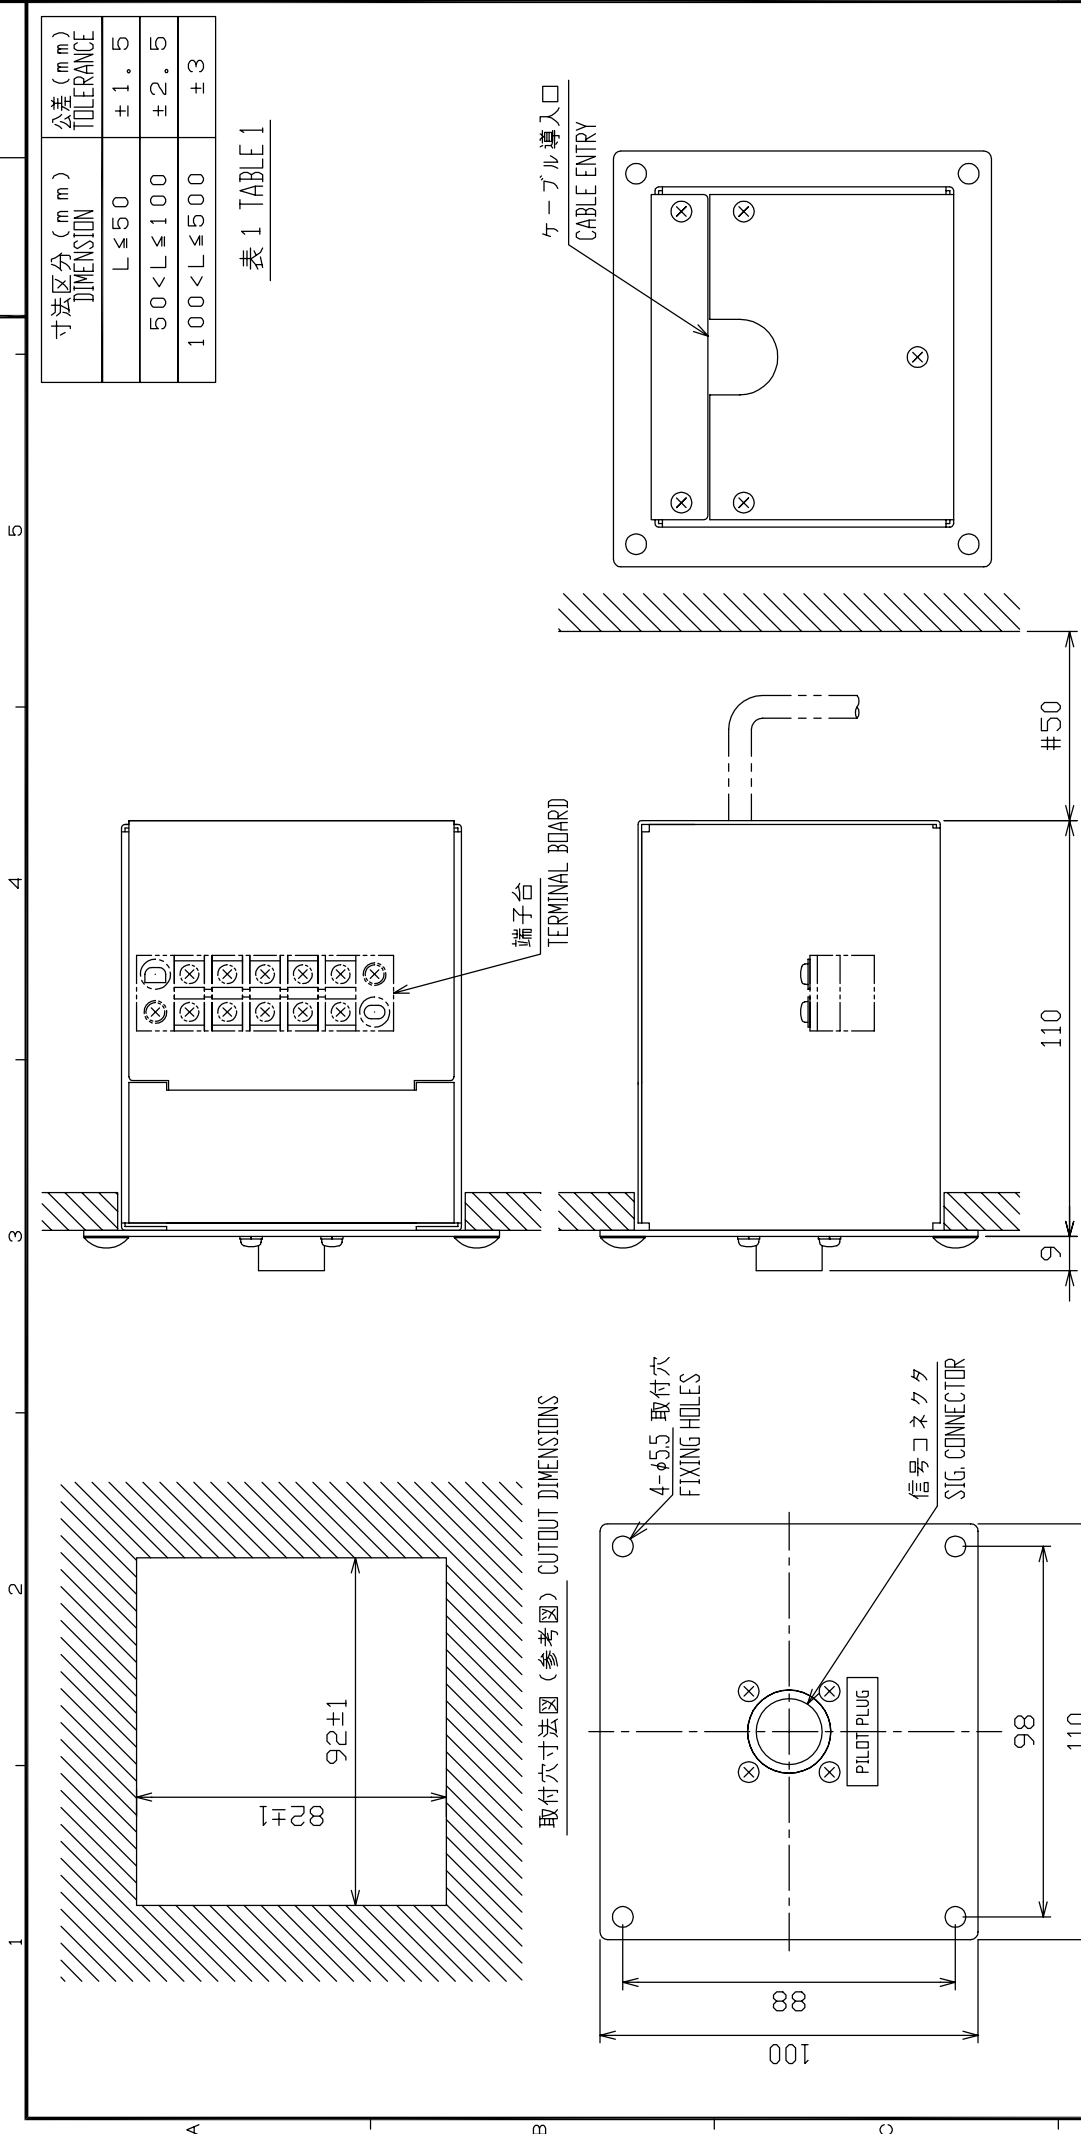

| 寸法区分 (mm) DIMENSION | 公差 (mm) TOLERANCE |
|------------------------|----------------------|
| $L \leq 50$ | ± 1.5 |
| $50 < L \leq 100$ | ± 2.5 |
| $100 < L \leq 500$ | ± 3 |

表 1 TABLE 1


注 記

- 1) #印寸法は推奨するサービス空間寸法。
- 2) 指定外の寸法公差は表 1 による。
- 3) 取付には M5 ボルト、またはトラスタック ピンネジ呼び径 5 を使用のこと。

NOTE

1. # RECOMMENDED SERVICE CLEARANCE.
2. TABLE 1 INDICATES TOLERANCE OF DIMENSIONS.
3. USE M5 BOLTS OR TAPPING SCREWS $\phi 5$ FOR FIXING THE UNIT.

| | | | | |
|----------|-------------|---------------|-------|-----------------|
| DRAWN | Oct. 2 '03 | T. YAMASAKI | TITLE | OP24-3 |
| CHECKED | Oct. 2 '03 | T. MATSUGUCHI | 名称 | パイロットプラグユニット |
| APPROVED | Oct. 02 '03 | 伊 賀 敏 行 | 外寸図 | |
| SCALE | 1/2 | MASS 0.58 kg | NAME | PILOT PLUG UNIT |
| DWG. No. | C4417-G08-D | | | OUTLINE DRAWING |
| | | | | 24-003-420G-1 |

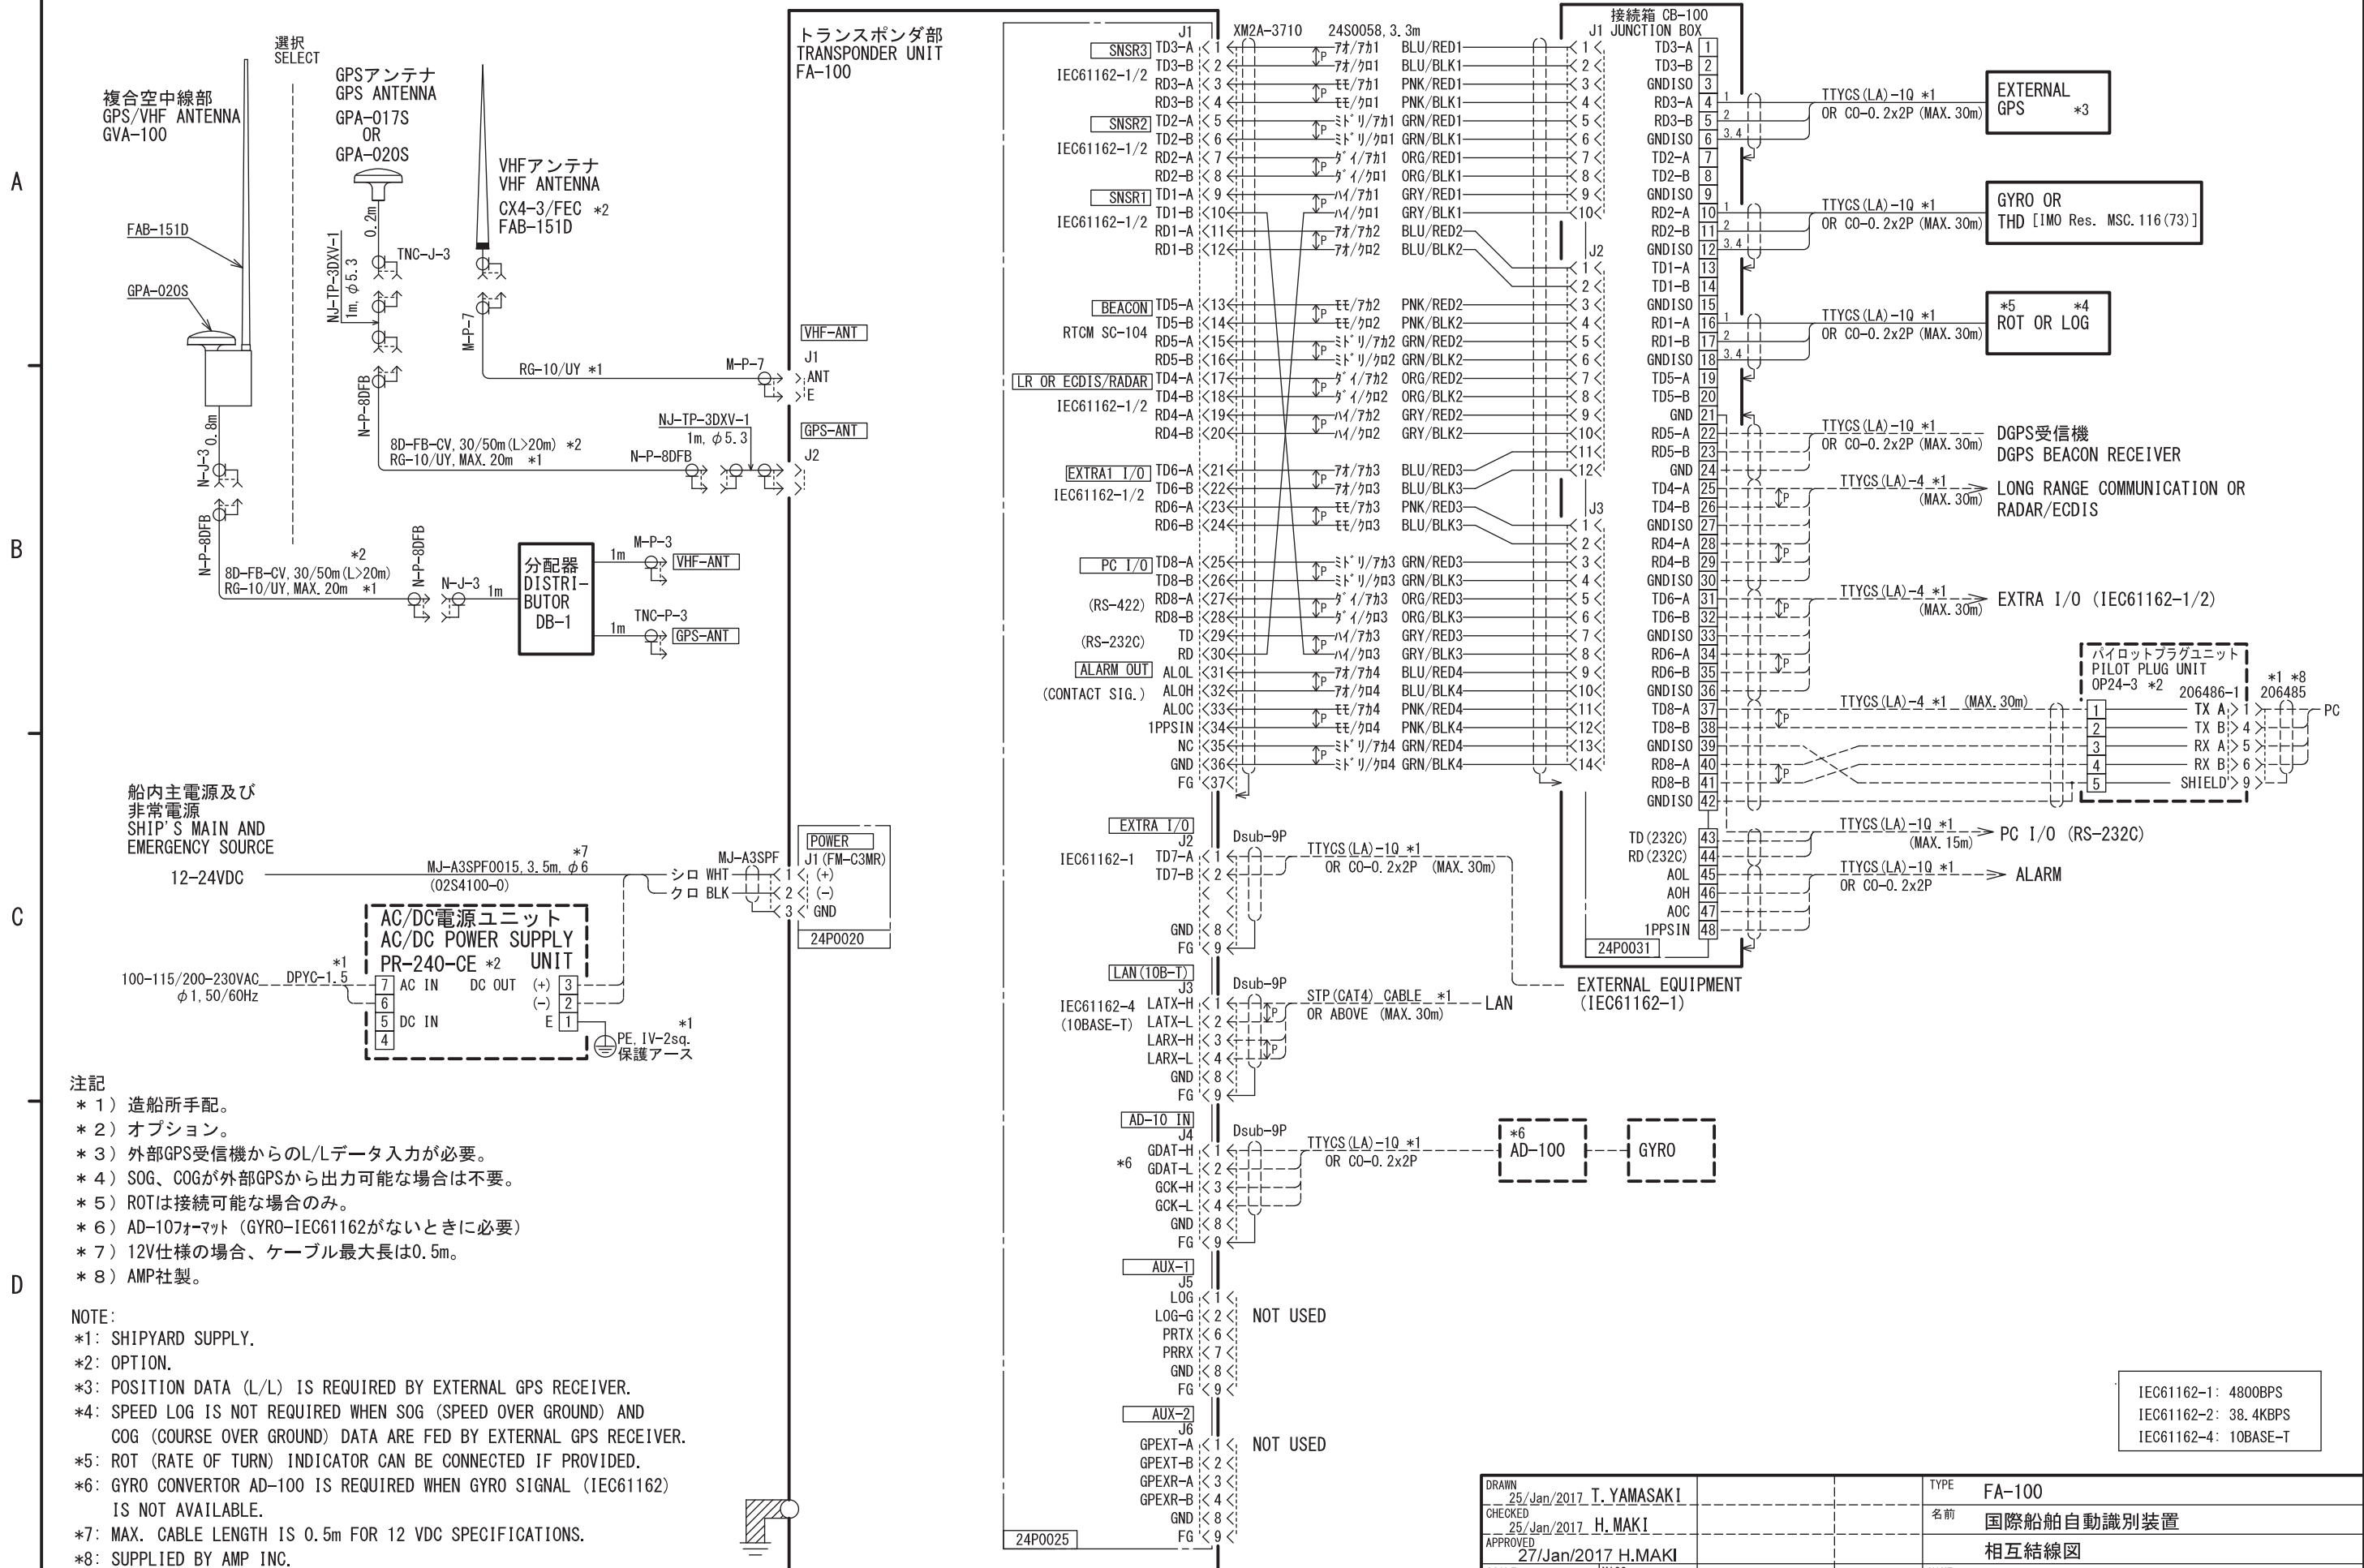

- 注記
- * 1) 造船所手配。
 - * 2) オプション。
 - * 3) 外部GPS受信機からのL/Lデータ入力が必要。
 - * 4) SOG、COGが外部GPSから出力可能な場合は不要。
 - * 5) ROTは接続可能な場合のみ。
 - * 6) AD-10フォーマット (GYRO-IEC61162がないときに必要)
 - * 7) 12V仕様の場合、ケーブル最大長は0.5m。
 - * 8) AMP社製。

- NOTE:
- *1: SHIPYARD SUPPLY.
 - *2: OPTION.
 - *3: POSITION DATA (L/L) IS REQUIRED BY EXTERNAL GPS RECEIVER.
 - *4: SPEED LOG IS NOT REQUIRED WHEN SOG (SPEED OVER GROUND) AND COG (COURSE OVER GROUND) DATA ARE FED BY EXTERNAL GPS RECEIVER.
 - *5: ROT (RATE OF TURN) INDICATOR CAN BE CONNECTED IF PROVIDED.
 - *6: GYRO CONVERTOR AD-100 IS REQUIRED WHEN GYRO SIGNAL (IEC61162) IS NOT AVAILABLE.
 - *7: MAX. CABLE LENGTH IS 0.5m FOR 12 VDC SPECIFICATIONS.
 - *8: SUPPLIED BY AMP INC.

CO-0.2x2P: CO-SPEVV-SB-C 0.2x2P, φ10.5

| | |
|----------------------------------|---------------------------|
| DRAWN 25/Jan/2017 I. YAMASAKI | TYPE FA-100 |
| CHECKED 25/Jan/2017 H. MAKI | 名前 国際船舶自動識別装置 |
| APPROVED 27/Jan/2017 H. MAKI | 相互結線図 |
| SCALE MASS kg | NAME U-AIS TRANSPONDER |
| DWG. No. C4417-C02-M | INTERCONNECTION DIAGRAM |